



PATENT PRODUCT


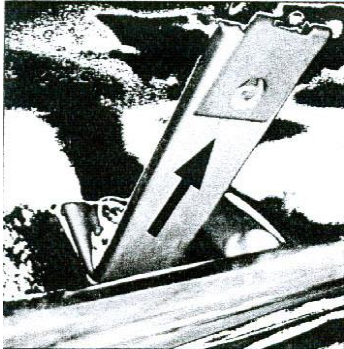
Grille Installation Instruction

Rev. 190501

Part#	GR03FEG75C/J/S	Application	For 2007-2010 Chevy Silverado 2500 HD /2007-2010 Chevy Silverado 3500 HD /2007-2013 Chevy Silverado 1500
--------------	----------------	--------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille insert	1	Stainless steel	5	Lock Washers	2	1/4"
	2	Bolts	2	1/4-20x3/4 "	6	Screws	2	#8 x1 1/4 "
	3	Nuts	2	1/4-20	7	U-Nuts	2	#8
	4	Flat Washers	2	1/4"	8	L Brackets	2	/

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the radiator cover from the vehicle; then the four 10mm bolts along the top of the grille. The grille has four metal clips along the bottom and two in the center; these secure the grille to the core support. Use a slotted screwdriver to release the clips. Remove the grille.	
3	From the top of the factory bumper, remove two round plastic fasteners. You will use these holes to install your new bumper grille. Install a #8 U-Nut on the smaller 3/16" hole in 'L' brackets. Use the 1/4 bolts, nuts and washers to secure the other end (use the hole closest to the bend) to the bumper. Install into the plastic fasteners holes (do not tighten at this time). Center the billet into the opening; use the #8 screws to secure the billet to the brackets. Adjust the mounting brackets if needed; tighten the hardware.	
4	Re-install grille assembly and radiator cover back onto the vehicle.	
5	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!