



PATENT PRODUCT

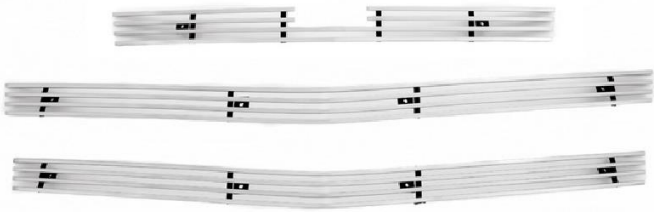
Grille Installation Instruction

Rev. 190301

Part#	GR03FEG88 C/S/J	Application	For 2003-2006 Chevy SSR Combo
--------------	--------------------	--------------------	--------------------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	3	Stainless steel	3	Screws	10	8# × 3/4"
	2	Flat Nut	10	8#				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Remove the grille from the box. Test fit the grille to make sure that it fits in the shell properly. Make sure the grille is centered.	
4	Place screws through tabs welded on grille.	
5	Secure the billets using the screws and nuts provided.	
6	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!