



PATENT PRODUCT


Grille Installation Instruction


Rev. 180801

Part#	GR03FEI67C/J	Application	FOR 2014-2015 Chevy Camaro SS V8 Lower Bumper		
-------	--------------	-------------	---	--	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	1	Stainless steel	3	U- Nuts	4	8#
	2	Screws	4	8#X2"	4	Bracket	4	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Take the four brackets and install the four u-nuts onto them (Fig 1).	
4	From the driver side insert the brackets through the bars and slide the brackets opening through the vertical bars. Make sure to slide towards the driver side and vice versa for the passenger side. Place a bracket on the second and fourth vertical bar from each side. The u-nuts on the brackets should align with the small square tabs with the hole in the center that are welded to the back of the billet grille (Fig 2).	
5	With all the brackets installed on the bumper overlay your billet grille into the factory bumper. Make sure the holes on the welded tabs on the back of the billet grille align with the u-nuts installed on the brackets. Insert the 2" screws through the hole in the tab on the back of the billet grille and the u-nuts and tighten. This will keep your grille secured and in place (Fig 3).	

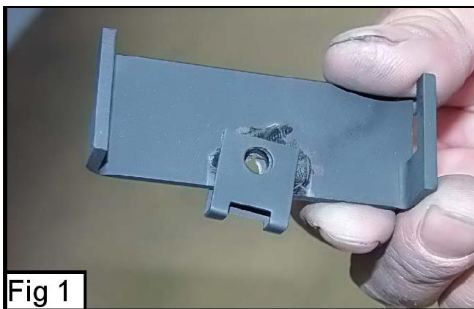

6	Make sure the grille is centered and tighten the fasteners.
7	Reinstall the black plastic cover which was removed in step 2.
8	Installation completed!!!

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!