




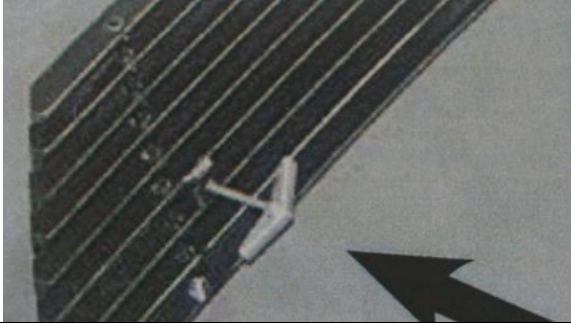


# PATENT PRODUCT

## Grille Installation Instruction

<b>Part#</b>	GR03FEI97 C/S/J	<b>Application</b>	<b>For 2014-2015 Chevy Camaro LT/LS With RS Package</b>
--------------	--------------------	--------------------	---

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	1	Stainless steel	3	Machine screw	4	6-32x1 1/2"
	2	Toggle nut	4	6-32				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Take the four machine screw and insert them through the front of the billet grille bars and the small square tabs with a hole in the center that are welded to the back of the billet grille, take the four toggle wing and install them onto the machine screws.	
3	Place the billet grille with the four screws and toggle wings installed into the bumper cover opening.	
4	Using a flat screwdriver reach through the billet bars and spin the toggle wings horizontally so that they insert through the plastic bars in the bumper cover, while holding the toggle with the flat screwdriver use a phillips screwdriver to tighten the machine screws until the billet is secure in the vehicle bumper cover.	
5	Replace the clips on the splash guard if you removed them.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!