



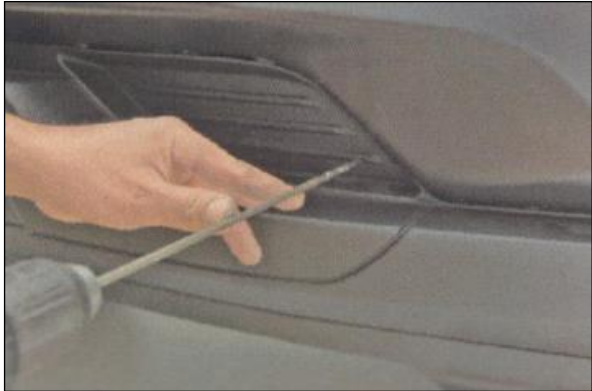

PATENT PRODUCT

Grille Installation Instruction

Rev. 190701

Part#	GR03FFC23 C/J/S	Application	For 2016-2018 Chevy Silverado 1500 Lower Bumper					
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	3	Toggle Nut	6	6-32
	2	Bolts	6	6-32×1.5"				
Install Notes: Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input checked="" type="checkbox"/> Cut <input type="checkbox"/>								
Step	Description				illustration			
1	Identify the grille & hardware with parts list.							
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.							
3	At this point you will need to mock up the grille and put it into place in the lower bumper opening. The objective here is to mark holes for drilling. Remove the grille and drill holes according to your mark.							
4	Hold the grille up to the opening of the factory shell. Be sure the bolts are through the OEM grille shell.							
5	Secure grille using the toggle nuts from underneath the front bumper.							
6	Reinstall the black plastic cover which was removed in step 2.							
7	Installation completed!!!							

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!