

Part#

GR03FFC60

C/J/S

PATENT PRODUCT

Grille Installation Instruction


For 2016-2018 Chevy Silverado 1500 Not For Z71 and **Application** High Country Model

Rev. 190401

	Item	Part Name	QTY	Descrip	tion	Item	Part Name	QTY	Description
Parts L	1	Upper Billet Grille	1 Stainless s		teel	4	U-Clip Nuts	8	8#
Parts L	2	Lower Billet Grille	ower Billet Grille 1 Stainles		teel	5	Tabs	8	
	3	Bolts	8 8#x2.5"						
Install Notes: Overlay $\boxed{\hspace{1em}}$ Replacement $\boxed{\hspace{1em}}$ Drill $\boxed{\hspace{1em}}$ Cut $\boxed{\hspace{1em}}$									
Step	Description				illustration				
1	Identify the grille & hardware with parts list.								
2	Optional (for vehicles with black plastic cover under hood). Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.								
3	Center the billet grille into the opening of the factory grille shell. Secure the bolts to the threaded holes on the front of the grille. Be sure the bolts are through the grille shell.								
4	Install the	U-Clip Nuts onto the T	abs.						

Secure billet grille using the U-Clip nuts and tabs

from the back side of the grille shell.

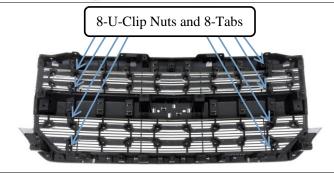

- 6 Make sure the billet grille is centered and tighten the fasteners.
- 7 Reinstall the black plastic cover which was removed in step 2.

8 Installation completed!!!

5



The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Looking for dependable car and truck custom grilles? Rely on APG for quality and long-lasting products.