



PATENT PRODUCT


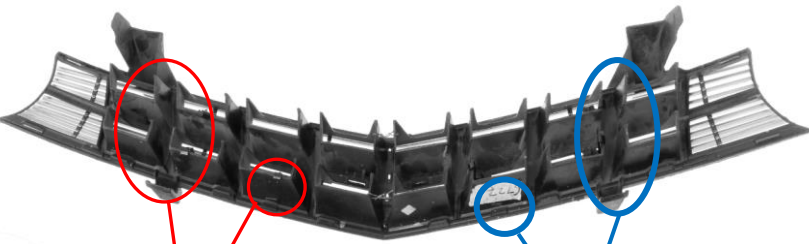
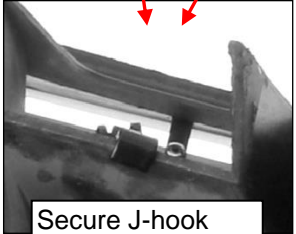
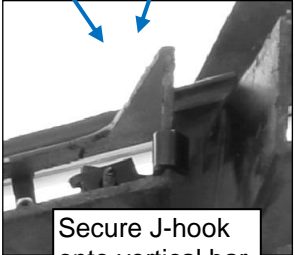

Grille Installation Instruction

Rev. 191101

Part#	GR03FFG20 C/S/J	<i>Application</i>	For 2010-2013 Chevy Camaro LT Long/2010-2013 Chevy Camaro LS Long/2010-2013 Chevy Camaro SS Long
--------------	--------------------	--------------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	'J' Hooks	6	
	2	U- Clip Nuts	6	8#	4	Screws	6	8×2 1/2"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Place one screw through each of the welded tabs on the billet grille. Place a U-clip nut over each of the holes on the J hook.	
4	Where the screws come through the grille shell, place a J hook in align with the screw and tighten. Make sure the hook wraps the rear edge of the grille shell. Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center.	 <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;">  <p>Secure J-hook onto horizontal bar</p> </div> <div style="text-align: center;">  <p>Secure J-hook onto vertical bar</p> </div> </div>
5	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!