



Grille Installation Instruction

Part#	GR03GAC12T	Application	For 2014-2020 Chevy Impala Logo Show (Not For 2014-2016 Chevy Impala Limited)
-------	------------	-------------	---

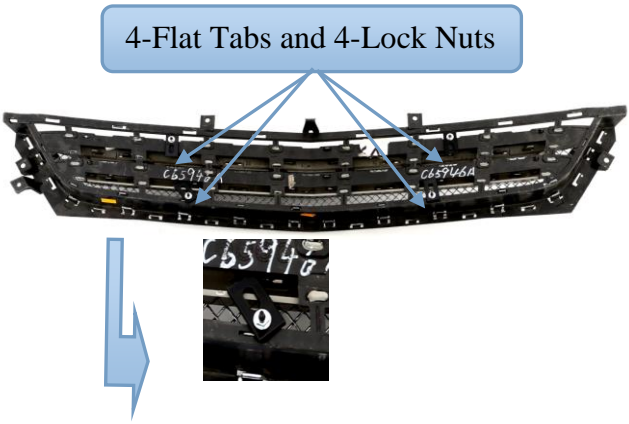

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	2	Stainless steel	4	Lock Nut	10	6-32
	2	Stud	6	6-32x2 1/2"	5	Flat Tab	10	/
	3	stud	4	6-32x2"				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Start with the main grille section. Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Remove the plastic electroplating article decoration	
4	Secure the stud to the threaded holes on the rear of the grille.	<p>6--6-32x2 1/2" Studs</p>
5	Center the grille into the opening of the factory grille shell. You need mark and drill three holes. Be sure the studs are through the OEM grille shell.	
6	Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.	<p>6-Flat Tabs and 6-Lock Nuts</p>
7	Make sure the grille is centered and tighten the fasteners.	
8	Move on to the bumper grille section. Secure the stud to the threaded holes on the rear of the grille. the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Grille Installation Instruction

Part#	GR03GAC12T	Application	For 2014-2020 Chevy Impala Logo Show (Not For 2014-2016 Chevy Impala Limited)
9	Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.		<div style="border: 1px solid black; border-radius: 10px; background-color: #ADD8E6; padding: 5px; display: inline-block; margin-bottom: 10px;">4-Flat Tabs and 4-Lock Nuts</div> 
10	Make sure the grille is centered and tighten the fasteners.		
11	Reinstall the black plastic cover which was removed in step 2.		
12	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!