



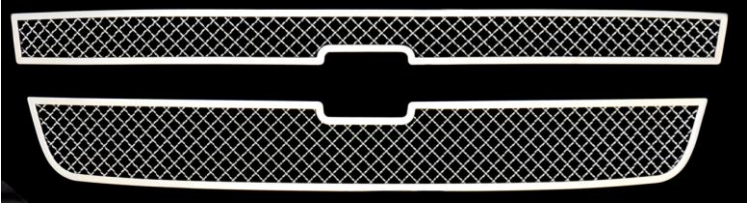
Grille Installation Instruction

Rev. 190301

| | | | |
|--------------|--------------------|--------------------|---|
| Part# | GR03GEC06 T/S/K | Application | For 2007-2007 Chevy Silverado 1500/2500 HD/ 3500 Classic Style/ 2005-2006 Chevy Silverado 2500 HD/3500/ 2006-2006 Chevy Silverado 1500 /1500 HD / 1500 SS |
|--------------|--------------------|--------------------|---|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-----------------|-----|-----------------|------|-----------|-----|----------------|
| | 1 | Mesh Grille | 2 | Stainless steel | 4 | Studs | 12 | 6-32 × 1 1/2 " |
| | 2 | Flat Tabs | 12 | | 5 | Washers | 12 | |
| | 3 | Nylon Lock Nuts | 12 | 6-32 | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. | |
| 3 | Center the grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell. | |
| 4 | Secure grille using the tabs and the nuts from the back side of the OEM grille shell. | |
| 5 | Make sure the grille is centered and tighten the fasteners, but do not over-tighten. | |
| 6 | Reinstall the black plastic cover which was removed in step 2. | |
| 7 | Installation completed!!! | |

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!