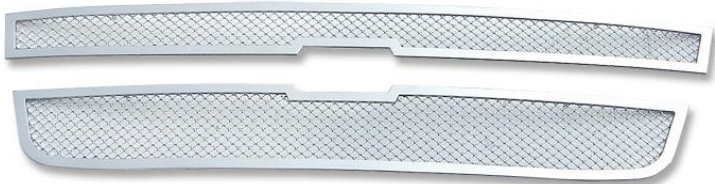


| | | | |
|-------|--------------|-------------|---|
| Part# | GR03GEG47T/H | Application | For 2004-2012 Chevy Colorado Not For Extreme |
|-------|--------------|-------------|---|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-----------------|-----|-------------|
| | 1 | Mesh Grille | 2 | Stainless steel | 4 | Screws | 8 | 6-32 × 1" |
| | 2 | Flat Tabs | 8 | | 5 | Plastic Washers | 8 | |
| | 3 | K-Lock Nuts | 8 | 6-32 | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|--|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. | |
| 3 | Thread a screw in each nut welded to the grille. From the rear, place a Plastic Washer and a flat tab on each screw. Now thread a nut on each screw. | |
| 4 | Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell. | |
| 5 | Secure billet grille using the k-lock nuts from the back side of the OEM grille shell. | |
| 6 | Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten. | |
| 7 | Reinstall the black plastic cover which was removed in step 2. | |
| 8 | Installation completed!!! | |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!