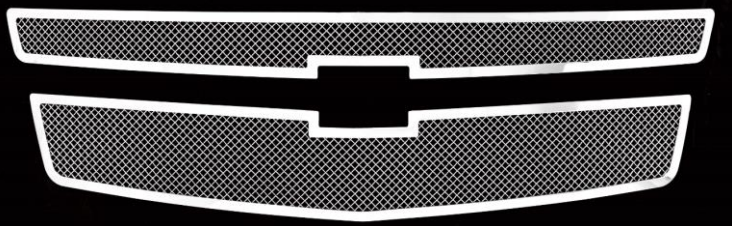
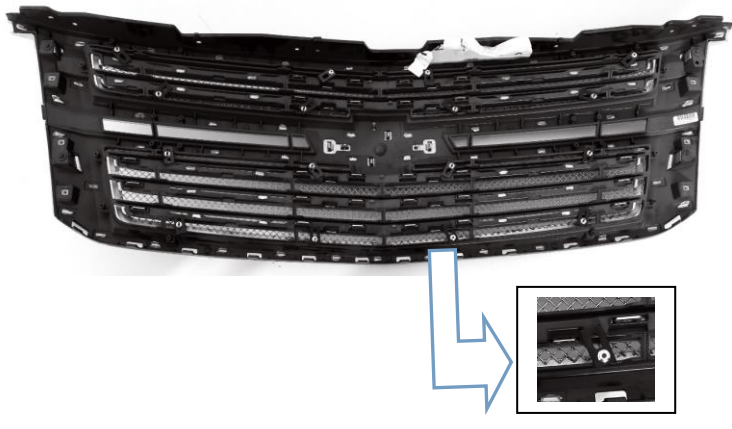
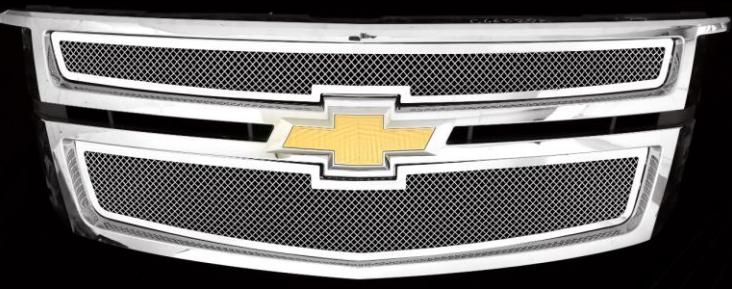


Part#	GR03GFC2 OH	Application	For 2015-2016 Chevy SUBURBAN/TAHOE Main Upper					
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	2	Stainless steel	3	Lock Nut	16	6#
	2	Flat Tab	16		4	stud	16	6# 1.5"
Install Notes: Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input checked="" type="checkbox"/> Cut <input type="checkbox"/>								
Step	Description				illustration			
1	Identify the grille & hardware with parts list.							
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.							
3	Secure the stud to the threaded holes on the rear of the grille.							
4	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell. According to Grille, may be You need mark and drill holes.							
5	Secure billet grille using the k-lock nuts from the back side of the OEM grille shell.							
6	Make sure the grille is centered and tighten the fasteners.							
7	Reinstall the black plastic cover which was removed in step 2.							
8	Installation completed!!!							

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Looking for dependable car and truck custom grilles? Rely on APG for quality and long-lasting products.