


|       |              |             |   |
|-------|--------------|-------------|---|
| Part# | GR03GFC23T/H | Application | For 2016-2018 Chevy Silverado 1500 Lower Bumper |
|-------|--------------|-------------|---|

| Parts List | Item | Part Name   | QTY | Description     | Item | Part Name      | QTY | Description |
|------------|------|-------------|-----|-----------------|------|----------------|-----|-------------|
|            | 1    | Mesh Grille | 1   | Stainless steel | 3    | Hex Flange Nut | 2   | 6-32        |
|            | 2    | Washer      | 2   |                 | 4    | Stud           | 2   | 6-32×2"     |

Install Notes: Overlay  Replacement  Drill  Cut



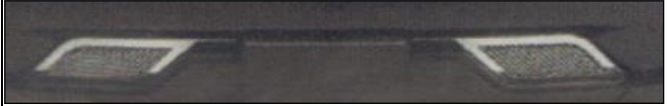
| Step | Description   | illustration   |
|------|---|--|
| 1    | Identify the grille & hardware with parts list.   |  |
| 2    | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. |  |
| 3    | Remove the license plate and license plate mounting component.  |  |



|   |  |
|---|--|
| 4 | At this point you will need to mock up the grille and put it into place in the lower bumper opening. The objective here is to mark holes for drilling. Remove the grille and drill holes according to your mark. |
|---|--|



The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

| Part# | GR03GFC23T/H  | Application  | For 2016-2018 Chevy Silverado 1500 Lower Bumper |
|-------|---|--|---|
| 5     | Secure the stud to the threaded holes on the rear of the grille.  |  |   |
| 6     | Hold the grille up to the opening of the factory shell. Be sure the studs are through the OEM grille shell. |    |   |
| 7     | Secure grille using the washers and hex flange nuts from underneath the front bumper.                       |  |   |
| 8     | Reinstall the license plate mount to the vehicle.   |   |   |
| 9     | Reinstall the black plastic cover which was removed in step 2.  |  |   |
| 10    | Installation completed!!!   |  |   |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!