


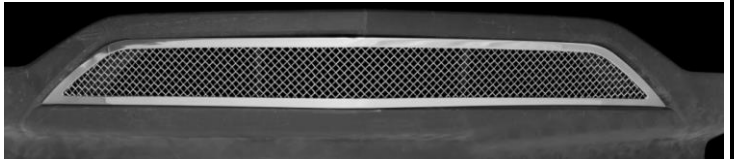


Part#	GR03GFC7 1T	Application	For 2016-2017 Chevy Equinox Lower Bumper					
-------	----------------	-------------	---	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Cross Head Tapping Screws	6	8#3/4"
2	U-Clip	6	74#					

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Hold the grille insert up to the opening of the factory shell, and make sure that it is centered in the grille shell. You need mark and dill six holes.	
4	Place screws through the welded Stainless steel tabs on the grille, and attach a U-clip nut on backside of factory grille.	  Drill 6 Holes
5	Make sure the grille is centered and tighten the fasteners. but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!