


Part#	GR03GFC75S/K	Application	For 2016-2018 Chevy Silverado 1500 Main Upper				
-------	--------------	-------------	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	5	Hex Flange Nuts	6	0.19-24UNC
	2	Screws	6	8#X1"	6	Trim Paned Retainer Clips	7	
	3	Flat Nuts	6	8#	7	Large Bottom Mounting Plate	1	
	4	Flat Washers	6					

Install Notes: Overlay Replacement Drill Cut

Step	Description	Illustration
1	Identify the grille & hardware with parts list.	

2	Turn off engine and chalk tires with stop block. Open hood. Disconnect Battery.	
---	---	--

3	Begin by removing all of the hardware that secures the factory grille to the vehicle core support. There should be the (3) 10mm bolts across the top near the front grille shell. (Fig 1-3)	
---	---	--

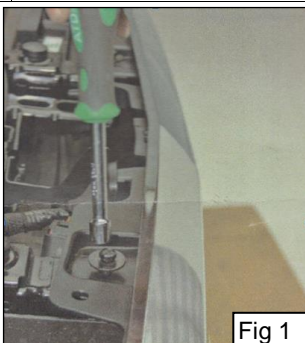


Fig 1

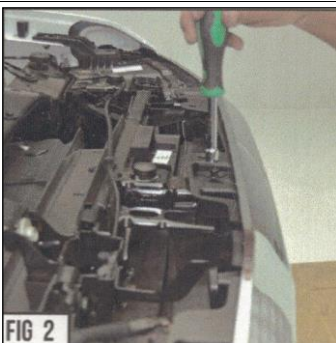


FIG 2

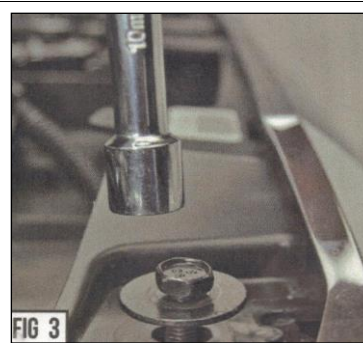


FIG 3

4	With the hardware removed the factory grille overlay is now ready to be un-installed off the vehicle. Using both hands, grab the very bottom corners of each side and firmly pull on both sides. This action will pull loose the clips at bottom of grill and release the grille from the grille mounts. The Grille should now be free to pull away from truck. (Fig 4-5)	
---	---	--



FIG 4

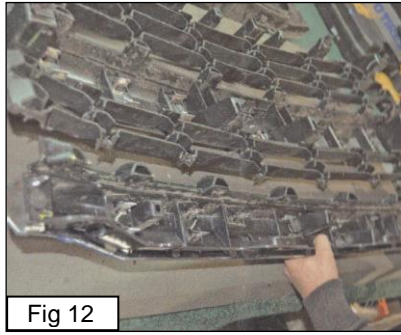
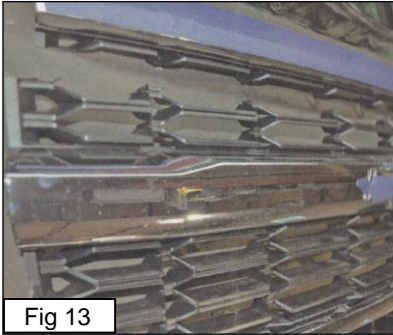
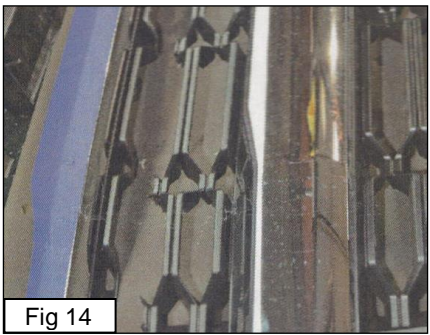

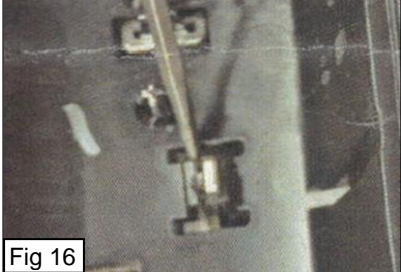

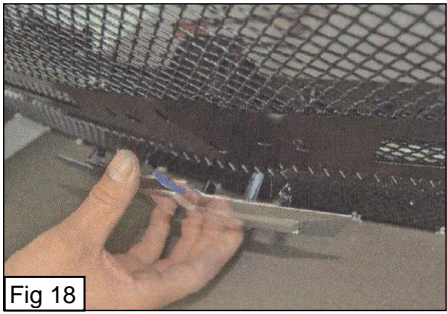
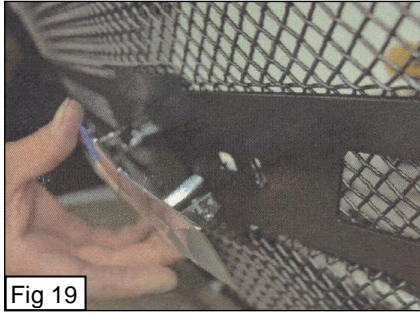
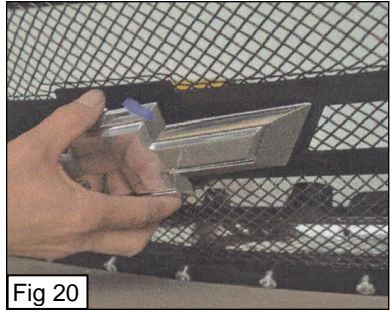
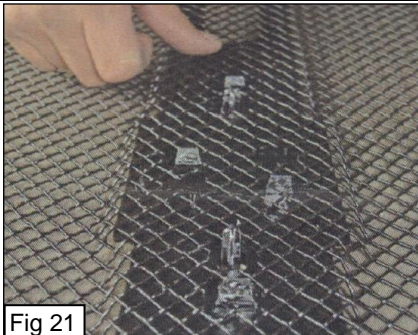




FIG 5

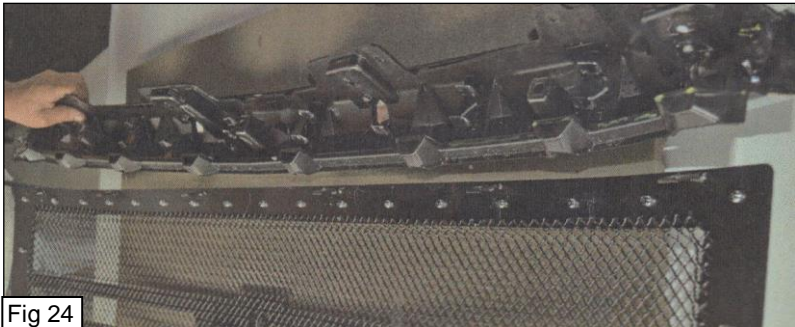


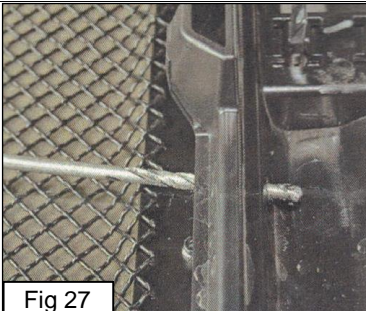
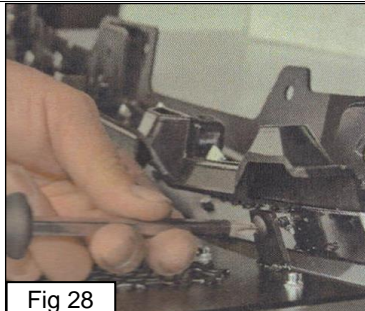

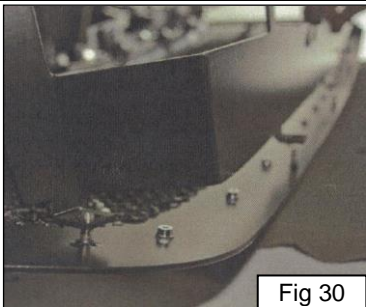
The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFC75S/K	Application	For 2016-2018 Chevy Silverado 1500 Main Upper
5	Flip the grille assembly over and place on a flat cushioned surface or foam pad to begin disassembly.		
6	It is now time to remove the radiator induction shroud. Remove all the plastic push tabs that secures the shroud and set asides for later. (Fig 6-9)		
7	It is now time cut into the factory grille honeycomb pattern and separate the factory grill shell to re-purpose and utilize with your new grille. Using a 90 degree cutoff wheel, zip saw, sawzall or something similar, cut along the presented red line. (Fig 10-11)		
8	At this point, check over your work and make certain your cut reflects the images presented here. (Fig 12-14)		

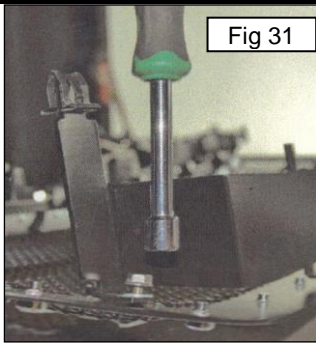
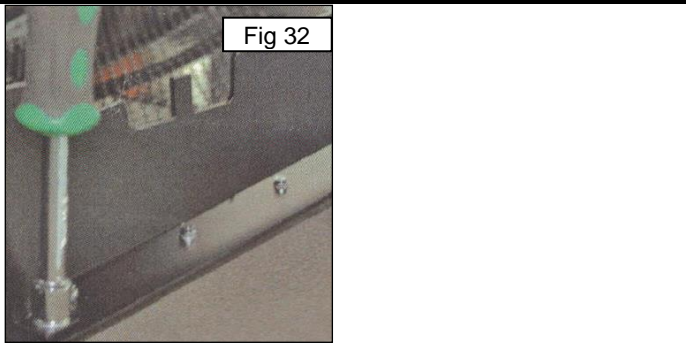
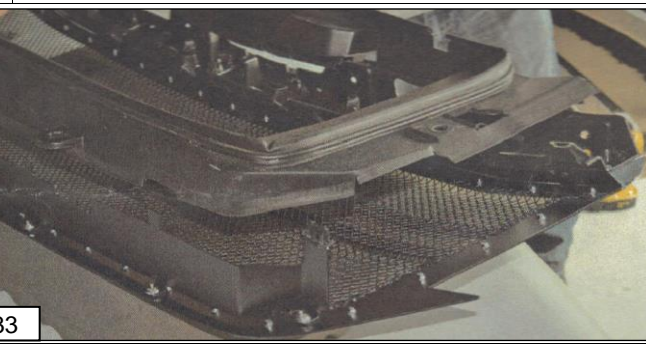
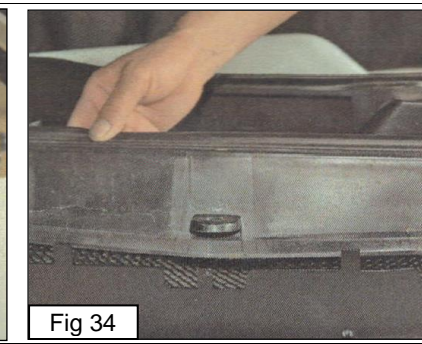
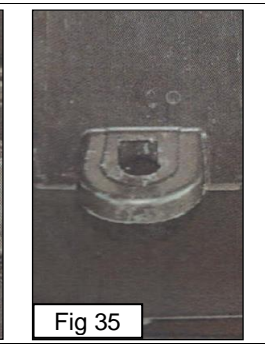
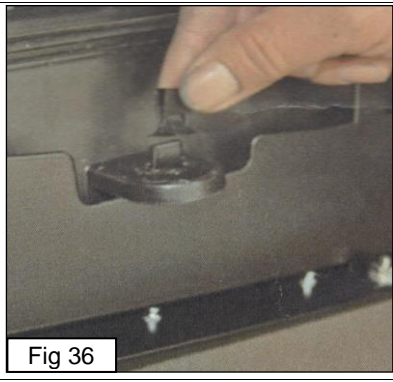
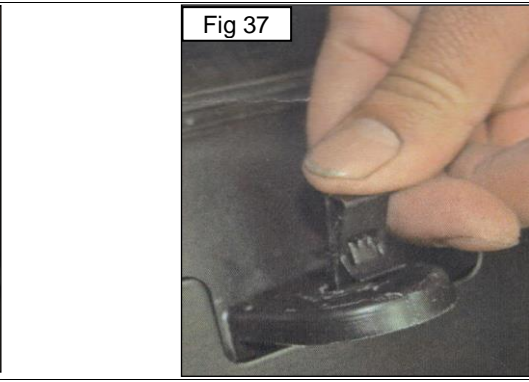
The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFC75S/K	Application	For 2016-2018 Chevy Silverado 1500 Main Upper
	 <p>Fig 12</p>	 <p>Fig 13</p>	 <p>Fig 14</p>
9	<p>For those that do want to feature the Chevrolet Bow tie Badge, you will need to first remove it from the factory grille. Flip it face down to access the tabs that secures the badging. From the back side, use a flat head screw driver to pry the tabs free and pop loose the badge. From the front side pull free from the factory grille. (Fig 15-17)</p>		
	 <p>Fig 15</p>	 <p>Fig 16</p>	 <p>Fig 17</p>
10	<p>Position the bow tie badge and put into place over the new grill. Your new grille will have locating cutouts to accept the bow tie badge. (Fig 18-20)</p>		
	 <p>Fig 18</p>	 <p>Fig 19</p>	 <p>Fig 20</p>
11	<p>With the grille face down and the badge put into place, firmly press down and insert the provided clips onto the badge's tabs. (Fig 21-23)</p>		
	 <p>Fig 21</p>	 <p>Fig 22</p>	 <p>Fig 23</p>

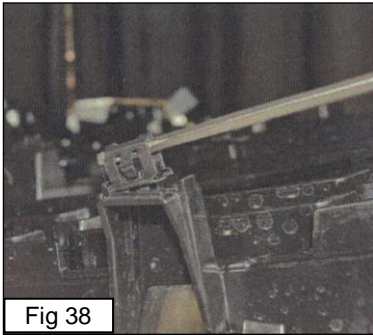
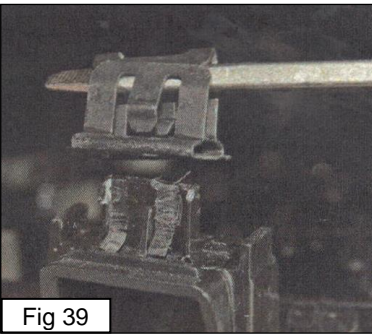
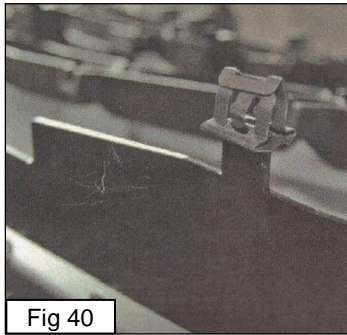
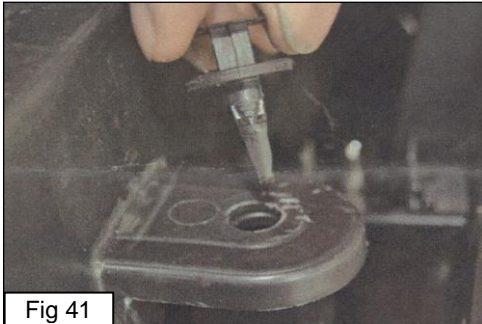
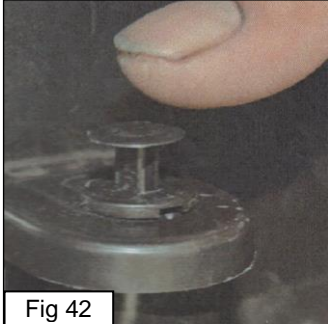
The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFC75S/K	Application	For 2016-2018 Chevy Silverado 1500 Main Upper
12	It is now time to mate the grille to the factory shell piece. This is the most critical step of the installation. It is advised to have a friend or helper hold the individual parts. Carefully align the grille so that it sits evenly aligned with the shell. (Fig 24-25)		
 <p data-bbox="181 667 256 697">Fig 24</p>		 <p data-bbox="1047 667 1122 697">Fig 25</p>	
13	With your grille alignment placed and finalized, use the Grilles mounting tabs to determine your drill holes. (Fig 26-27)		
14	Using the provided screws, fasten and secure the grille to the factory shell piece. (Fig 28)		
 <p data-bbox="131 1142 222 1171">Fig 26</p>		 <p data-bbox="738 1142 829 1171">Fig 27</p>	 <p data-bbox="1128 1142 1219 1171">Fig 28</p>
15	Place the provided lower mounting plate and rest the mounting tabs over the pre placed threaded studs. (Fig 29-30)		
 <p data-bbox="230 1520 321 1549">Fig 29</p>		 <p data-bbox="1209 1520 1300 1549">Fig 30</p>	
16	Using a wrench or rout driver, tighten the (6)provided 10mm nuts down to secure the lower mounting plate to the new grille. Double check your work and make sure everything is good and tight. (Fig 31-32)		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFC75S/K	Application	For 2016-2018 Chevy Silverado 1500 Main Upper
	 <p style="text-align: right;">Fig 31</p>		 <p style="text-align: right;">Fig 32</p>
17	<p>Take the radiator induction shroud that was set aside earlier and align it over your new grille assembly. Line up the tabs and set it down in place. (Fig 33-35)</p>		
	 <p style="text-align: left;">Fig 33</p>	 <p style="text-align: left;">Fig 34</p>	 <p style="text-align: left;">Fig 35</p>
18	<p>Using the provided push clips, firmly press them down so that they latch onto the lower mounting plate and secures the radiator induction shroud. (Fig 36-37)</p>		
	 <p style="text-align: left;">Fig 36</p>	 <p style="text-align: left;">Fig 37</p>	
19	<p>Remove all the fastener clips from the factory grille that was cut off from the shell. (Fig 38-39)</p>		
20	<p>Re-use the grille mounting fastener clips and place them along the larger higher post tabs. Press them down so they sit securely on the tabs. (Fig 40)</p>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFC75S/K	Application	For 2016-2018 Chevy Silverado 1500 Main Upper
	 <p data-bbox="191 558 266 583">Fig 38</p>	 <p data-bbox="665 558 740 583">Fig 39</p>	 <p data-bbox="1122 558 1196 583">Fig 40</p>
21	<p data-bbox="219 604 1498 661">Re-using the plastic push tabs that were set aside during the grille disassembly, re-insert them into their mounting points which will fully secure the radiator induction shroud to the factory grille shell and complete grille assembly. (Fig 41-42)</p>		
	 <p data-bbox="337 968 412 993">Fig 41</p>		 <p data-bbox="984 968 1058 993">Fig 42</p>
22	<p data-bbox="219 1018 1498 1075">Check over your work for hardware tightness and visual inspection. Re-install the grille assembly in the reverse order that it was removed from the vehicle.</p>		
23	<p data-bbox="219 1102 1498 1192">At this point you want to look over your work and examine the gap alignments around all edges and in between the new grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. If adjustment is needed, you can remove grille and loosen the hardware mounts and shift side to side or up&dpwn to achieve proper look.</p>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!