

**PN: GR03GFE79T**

**03-06 Hummer H2 – Upper Class Series Grille – Main Grille Insert – Polished Stainless Steel – Custom Full Center Opening Style**

Hardware

8-- 6-32×2" Studs




8 -- 6-32 Nylon Lock Nuts

8-- 135 ' Flange Brackets

8 -- Washers

NOTE: Instruction for billet grille also applies to stainless steel grille.

- (1) Open the hood and remove the grille. Place the grille face up on a worktable. The six chrome vertical bars in the center of the grille must be cut from the grille. The billet has a large perimeter that will cover your cuts. Apply a strip of masking tape along the top and bottom of the grille; approximately 7 1/4" apart. Make the two cuts along the top and bottom from the front. Test fit the billet in place. Now cut the remaining plastic from the back of the grille; make your cut approximately 1/4" from the back of the grille. This will leave a small lip around the back of the grille.
- (2) File or sand your cuts smooth. Center the grille; Thread a stud in each nut welded to the grille. Install a washer, flange and nut onto each stud. Tighten the nuts until the grille is held in place.
- (3) Re-install the grille assembly back onto the vehicle.

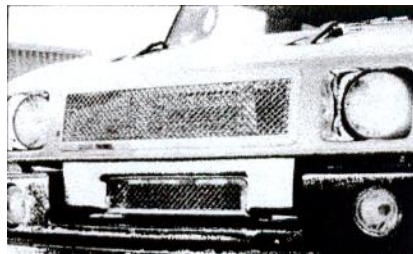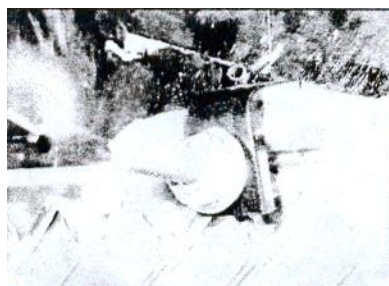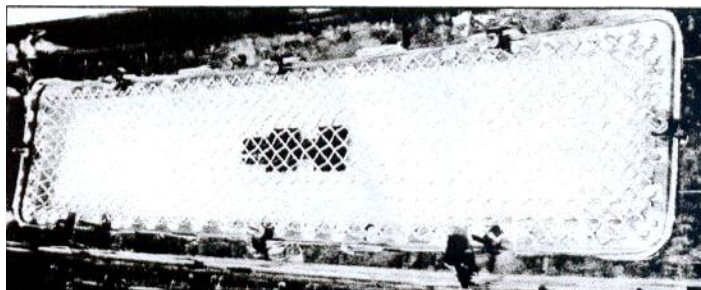

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!