

PN: GR03GFE80T

03-06 Hummer H2 – Low Bumper Stainless Steel Mesh Grille

Hardware

3-- 6-32×1" Studs


3 -- 6-32 Kep Nuts

3-- 1/2"×1/2" L Brackets

3 -- Washers

NOTE: Instruction for billet grille also applies to stainless steel grille.

- (1) Open the hood and remove the grille. Place the grille face up on a work-table. Apply masking tape to the grille.
- (2) Cut the molded plastic with holes from the grille. Make your cut about 1/8" inside the parting line around this area (this is necessary to hold the grille in place). We recommend cutting less rather than more; if too much material is cut, the grille will not secure properly. Test fit the grille into the opening. Remove more material if necessary.
- (3) Center the grille into the bumper opening; the plastic should overlap the sides of the grille. Thread a stud in each nut welded to the grille. Attach the L brackets to the top and end mounting studs using the nylon lock nuts; these wrap around plastic edge of the cut the bumper opening. Do not over tighten the L brackets.
- (4) Re-install the factory grille assembly onto the vehicle.

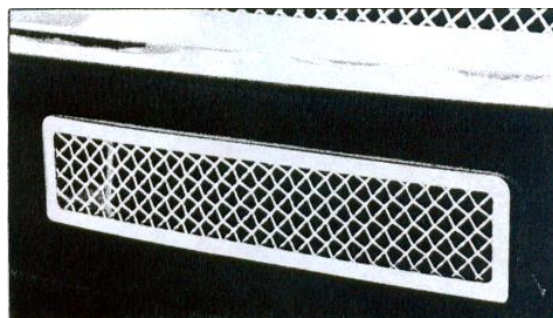

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!