




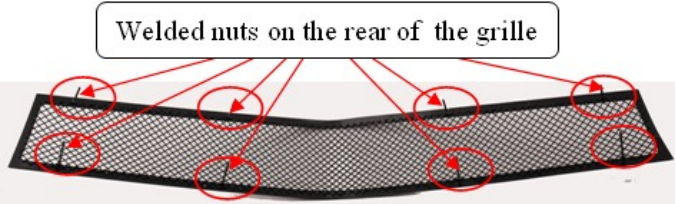
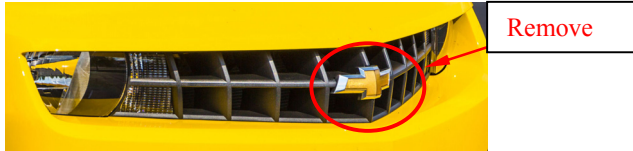
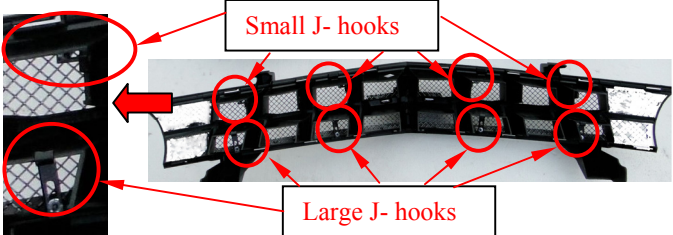

Grille Installation Instruction

Rev. 130101

Part#	GR03GFG21H	2010-2012 Chevy Camaro LT/ LS/ RS/SS Short Main Upper
-------	------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Grille insert	1	Stainless steel	4	'J' Hook	8	4 small & 4 large
	2	Thread stud	8	6#-32x2"	5	Washer	8	/
	3	Lock nut	8	6#-32	6	U-clip	2	For fix the bow tie

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Secure the thread studs in the threaded nuts on the rear on the mesh grille insert.	
3	Remove the "bow tie" from the vehicle. The "bow tie" will be re-used later.	
4	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. Note: If the space is too narrow to allow access to the rear of the grille shell, it is better to remove the OEM grille shell or front bumper from the vehicle.	
5	Center the Mesh grille from front side. Make sure the studs are through the OEM grille.	N/A
6	Fasten the billet grille insert on to the OEM grille with J-hooks, washers, lock nuts on the back side of the OEM grille.	
7	Install the bow tie onto the mesh grille & fix the bow tie with the 2 U-clip on the rear. <u>(If necessary, re-install the OEM grille shell with the mesh grille on the vehicle.)</u> Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!