
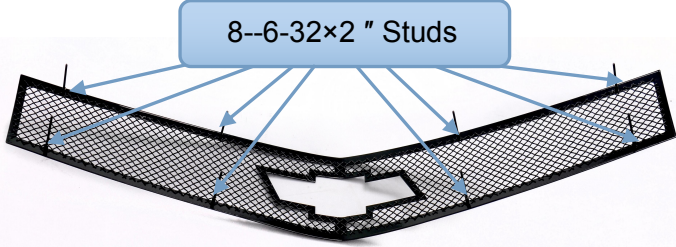
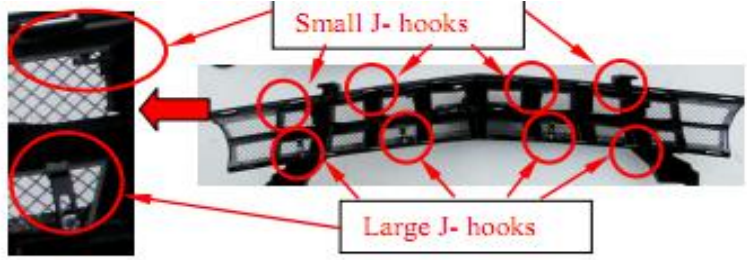



Part#	GR03GFG23T	Application	10 - 12Chevy Camaro LT/LS/RS/SS Short & With Logo Show Main Upper
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	small 'J' Hook	4	/
	2	Stud	8	6-32x 2 "	5	Large 'J' Hook	4	/
	3	Lock nut	8	6-32	6	Washers	8	/

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Secure the stud to the threaded holes on the rear of the grille.	
4	Pop hood, remove the black plastic cover (on top of OEM grille/ front panel) from vehicle. This will allow access to the rear of the grille shell. <b>Note: If the space is too narrow to allow access to the rear of the grille shell, it is better to remove the OEM grille shell or front bumper from the vehicle.</b>	
5	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	
6	Fasten the billet grille insert on to the OEM grille with J-hooks, lock nuts on the back side of the OEM grille.	
7	Make sure the grille is centered and tighten the fasteners.	
8	Reinstall the black plastic cover which was removed in step 2.	
9	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!