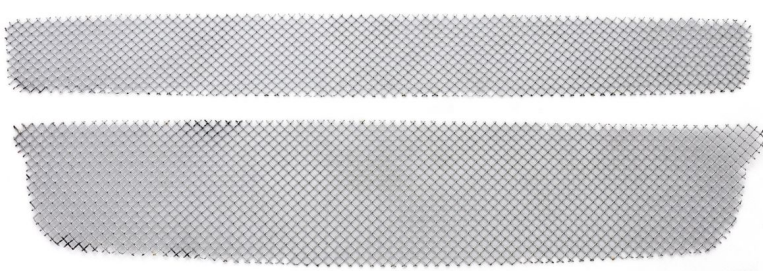


Part#	GR03GFG80Z	Application	08~10 Chevy Malibu – Main Upper Mesh Grille					
-------	------------	-------------	--	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	2	Stainless steel	4	Flat Washers	4	
	2	Long Brackets	2		5	Screws	2	
	3	Small L-Brackets	6		6	Speed Clips	2	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	

2 Remove the plastic push clips from the top side of the front fascia and the plastic filler panel. Figure 1

3 Remove all of the small bolts from the top side of the front fascia and the plastic filler panel. Figure 2

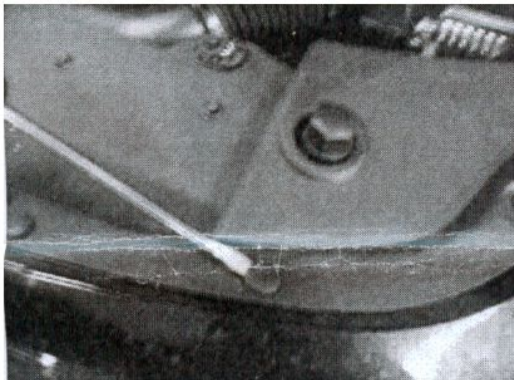


Figure 1

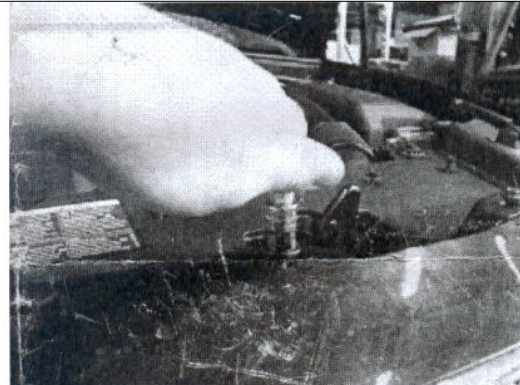


Figure 2

4 Once all of the clips and bolts are removed it is now time to remove the plastic filler panel.

5 Remove the small bolts and clips that attach the inner wheel well panel to the edge of the front fascia.

6 When the inner wheel well panel is free from the front fascia remove the 10mm bolts from each side of the fascia. Figure 3

7 Remove the small bolts that attach the lower filler panel from the bottom side of the front fascia.

8 Gently release each side of the front fascia from the vehicle by pulling on the side of the front fascia near the fender. Figure 4

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFG80Z	Application	08~10 Chevy Malibu – Main Upper Mesh Grille
-------	------------	-------------	--



Figure 3



Figure 4

9	Release the upper section of the front fascia by gently pulling up on the section near the fender and the headlight. Figure 5
10	When the front fascia is completely released from the vehicle and all of the fasteners are removed it is now time to remove the fascia from the vehicle. If your vehicle is equipped with fog lights they will need to be disconnected before you can remove the fascia.
11	Place the front fascia on a soft sheet or blanket to prevent scratching during the installation.
12	If your vehicle is equipped with a front license plate mount it will need to be removed to complete the installation. It can be reattached after the grille is installed and just before the fascia installed onto the vehicle.
13	Remove the 10 small bolts that attach the upper grille and black plastic cover to the fascia. Set the black plastic cover to the side as it will be reused later and remove the factory honeycomb section. Figure 6 & 7
14	Press the plastic clips on the left and right side to release the inner bumper support. Once released remove the inner bumper support and set aside as it will be reused later. Figure 8

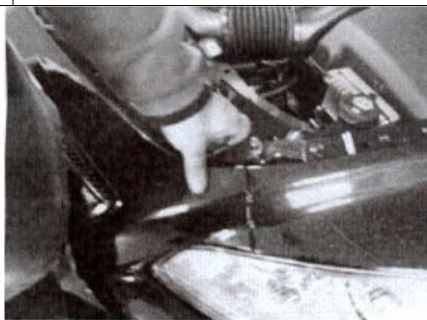


Figure 5

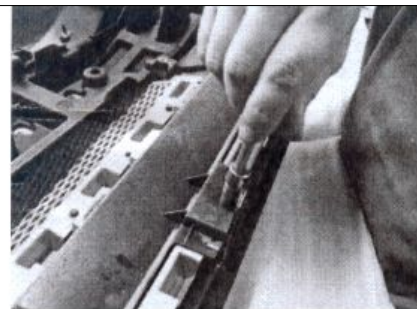


Figure 6

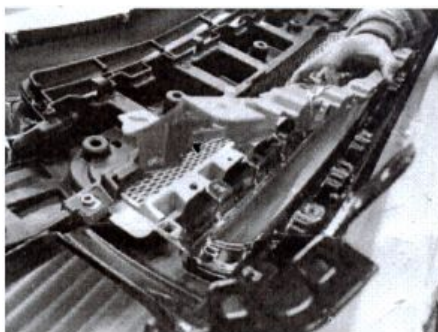


Figure 7

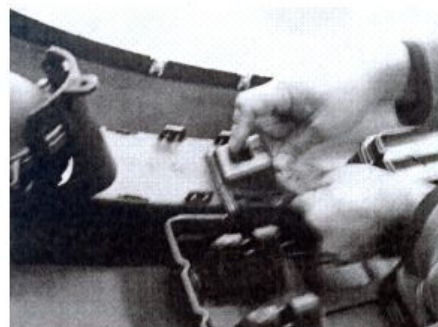
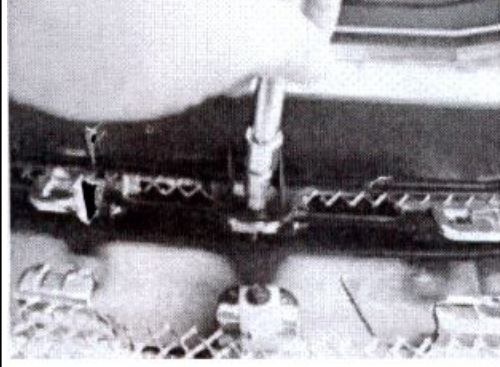



Figure 8

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFG80Z	Application	08~10 Chevy Malibu – Main Upper Mesh Grille
15	Remove the 8 small bolts from the lower factory honeycomb grille. Remove the honeycomb section once all of the bolts are removed. Figure 9 & 10		
Figure 9		Figure 10	
16	Position the wire mesh grille onto the lower opening. Figure 11		
17	Attach the bottom portion of the lower wire mesh grille to the fascia using the factory bolts and the supplied flat washers. Figure 12		
Figure 11		Figure 12	
18	Attach the sides and the top portion of the lower wire mesh grille to the fascia using the factory bolts and the supplied L-brackets. Figure 12		
19	Make sure that the wire mesh grille is positioned to your liking and secure all hardware.		
20	Position the upper wire mesh grille onto the factory opening.		
21	Place the black plastic cover back into position over the wire mesh grille. Make sure that the wire mesh grille is positioned correctly. Secure the black plastic cover using the factory hardware. Figure 13		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFG80Z	Application	08~10 Chevy Malibu – Main Upper Mesh Grille
22	Use the long brackets to hold each side of the wire mesh grille to the fascia. Position them so that the brackets are flat against the wire and line up with the lower outer factory tabs. Lock them in place using the supplied clips and screws.		
			
Figure 13		Figure 14	
23	Reinstall the inner bumper support that was removed in step 13.		
24	Check that both pieces of the wire mesh grille are positioned in each of the openings to your liking and make any needed adjustments.		
25	Reinstall the front fascia onto the vehicle by reversing steps 1-9 and secure using all of the factory hardware.		
26	Installation is now complete!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!