
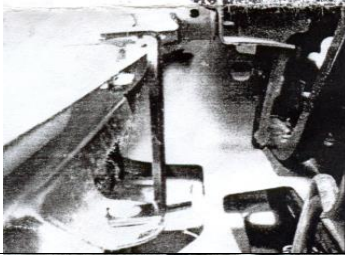
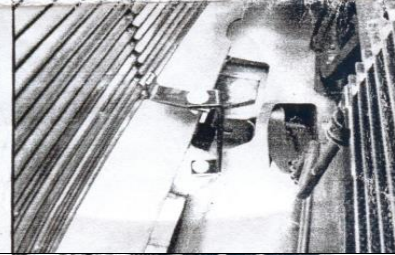

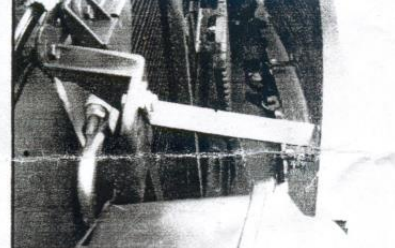


Part#	GR03HFH1 8J	Application	For 2005-2006 Chevy Silverado 2500 Full Face/2005-2006 Chevy Silverado 3500 Full Face
-------	----------------	-------------	---------------------------------------------------------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	7	Flat Nuts	4	8#
	2	Bolts	6	1/4-20×3/4"	8	Truss Head Tapping Screws	4	#8×3/4
	3	Nuts	6	1/4-20	9	Flange Brackets	2	
	4	Flat Washer	6		10	"U" Brackets	2	
	5	Lock Washers	6		11	"Z" Bracket	1	
	6	"L" Brackets	2		12	"Z" Bracket	1	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the plastic radiator cover. Now remove the grille shell from the vehicle. Test fit the billet grille in place. Use the bolts, nuts and washers to attach the Brackets to the grille and bumper. Center the grille onto the truck, align the face of the grille so it sits almost flush with the lights.	 
3	Attach the flange brackets to the outer tabs on top of the grille; use the screws and the flat nuts. Attach the other end of the brackets using the bolts, nuts and washers provided. It may be necessary to drill a 1/4" hole for the fasteners and (or) slightly bend the brackets by hand (using pliers) to achieve the proper fit.	 
4	Align the brackets to the panel. Fasten using the remaining nuts and bolts. Check that the hardware is tight and replace the radiator cover. Slowly close the hood and check the clearance to the hood. Loosen the hardware and adjust if needed.	
5	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!