

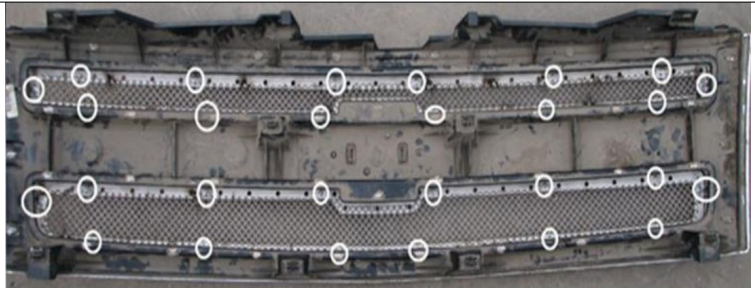


Part#	GR03LEA70H	Application	2007-2013 Chevy Silverado 1500 Main Upper
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	2	Stainless steel	3	Phillips Screws	28	10-24x3/4 "
	2	90° L rackets	28		4	Flange Nuts	56	10-24

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove plastic shroud at the top and set fasteners aside.	
3	<b>Optional:</b> Using factory instructions, remove the entire front grille shell.	
4	Attach 90° L Brackets to the screws on the grille, secure them with flange nuts	
5	Position the Grille onto grille shell cavity	
6	Mark locations for drilling on the shell through the other hole on the L Brackets, then remove the brackets and drill holes on these locations.	
7	Attach the Grille to the shell by inserting the screws through the holes of L Brackets and the holes on the shell, and then secure them with Flange Nuts provided	
8	Reinstall the plastic shroud with the fasteners removed in Step 2	
9	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!