
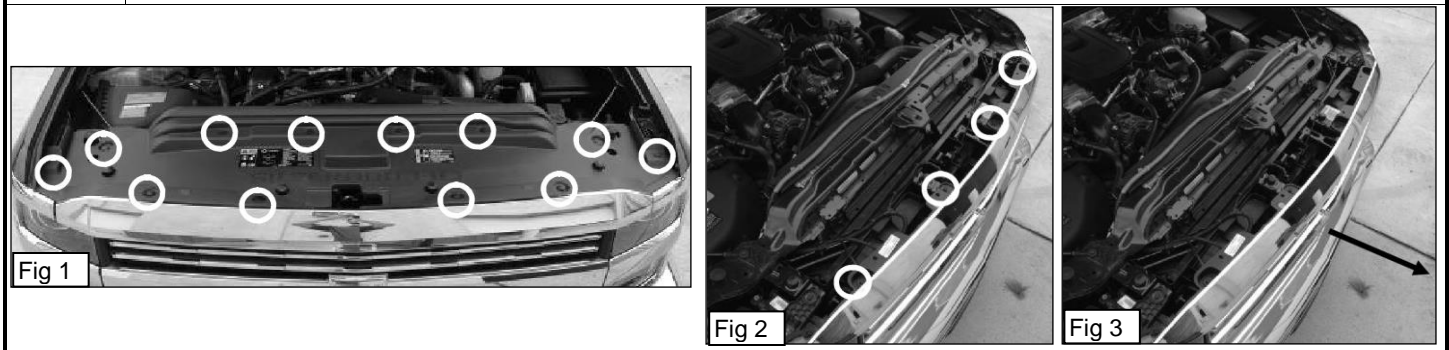


| | | | | | | | | |
|-------|--------------|-------------|---|--|--|--|--|--|
| Part# | GR03LEA84S/K | Application | For 2015-2018 Chevy Silverado 2500 /3500 | | | | | |
|-------|--------------|-------------|---|--|--|--|--|--|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|--------------|-----|-----------------|------|-----------------|-----|-------------|
| | 1 | Rivet Grille | 1 | Stainless steel | 3 | Hex Flange Nuts | 6 | 10# |
| | 2 | Flat Washers | 6 | | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | Illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove plastic cover by removing 12 retaining clips with flat head screw driver. (Fig 1) | |
| 3 | Once cover is removed, remove the top 4 grille screws with 10mm wrench. (Fig 2) | |
| 4 | Remove upper OEM grille by pulling grille forward away from the truck. (Fig 3). This will allow access to the rear of the lower grille shell. | |



| | |
|---|--|
| 5 | Position grille in lower grille shell and mark holes for drilling. Removed grille and drill (6) holes in locations marked. |
| 6 | Reinsert grille into lower grille shell and secure grille using (6) flat washers and (6) hex flange nuts from the back side of the lower grille shell. |
| 7 | Make sure the grille is centered and tighten the fasteners. |
| 8 | Reinstall the upper OEM grille which was removed in step 3. |
| 9 | Installation completed!!! |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!