
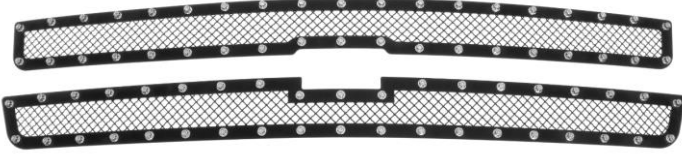


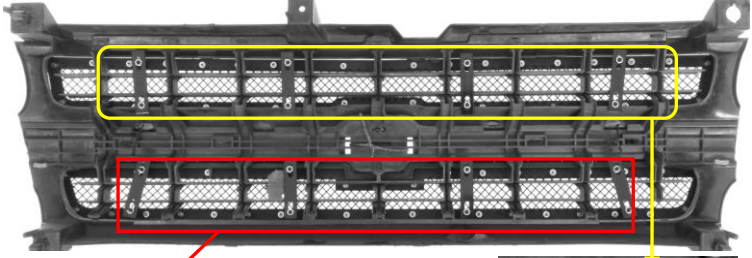


Part#	GR03LEG01H	Application	For 1999-2002 Chevy Silverado 1500/1500HD / 2000-2006 Chevy Suburban / 2000-2006 Chevy Tahoe/ 1999-2000 Chevy Silverado 2500/2500HD/3500
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	2	Stainless steel	3	Screws	16	10#×2"
	2	2-Hole Tabs	8		4	Nylon Lock Nuts	16	10#

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood). Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Center the billet grille into the OEM grille shell opening. Thread a screw in each nut welded to the grille.	
4	From the rear of the OEM grille shell, place a tab on each screw. Now thread a lock nut on each screw to secure the grille piece. Note: Position of 2-Hole tabs as shown.	 <p>Position of lower grille tabs.</p>  <p>Position of upper grille tabs.</p>
5	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!