



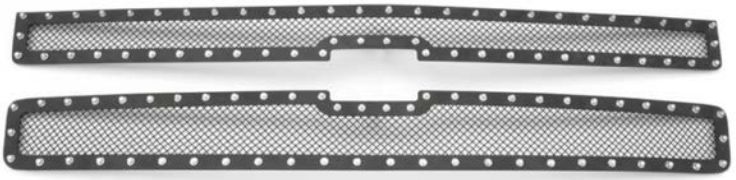
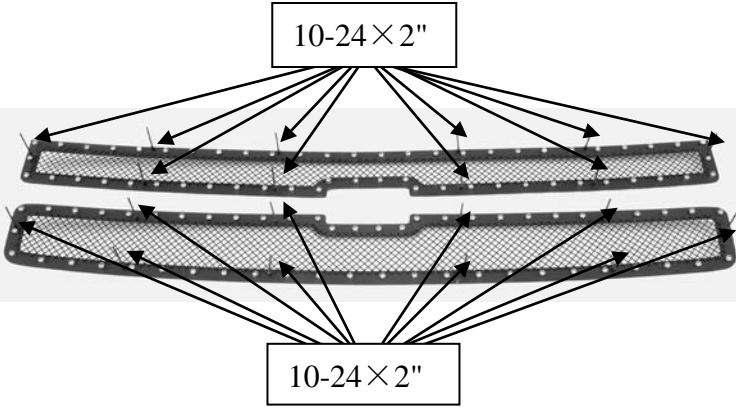
Grille Installation Instruction

Rev. 190501

Part#	GR03LEG74H	Application	For 2007-2010 Chevy Silverado 3500 HD /2007-2010 Chevy Silverado 2500 HD
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Rivet Grille	2	Stainless steel	3	Lock Nut	20	10-24
	2	Studs	20	10-24x2"	4	Flat Tab	20	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Secure the stud to the threaded holes on the rear of the grille.	
4	Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell.	
5	Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.	
6	Make sure the grille is centered and tighten the fasteners.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Looking for dependable car and truck custom grilles? Rely on APG for quality and long-lasting products.