
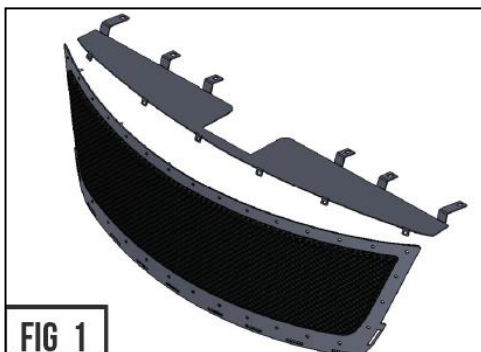


Part#	GR03LFC57H	Application	For 2015-2018 Chevy Colorado Not For ZR2					
-------	------------	-------------	--	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	9	U-Nuts	2	
	2	Grille Mount Top Plate	1		10	Long U-Nuts	10	
	3	Front Mounting Brackets	1		11	Hex Head Bolts	4	1/4-20UNCX3/4
	4	Front Mounting Brackets	1		12	Serrated Nuts	4	1/4-20UNC
	5	Support Tab Brackets	1		13	Serrated Nuts	8	10#-24UNC
	6	Support Tab Brackets	1		14	Flat Washers	4	16X6.5X1
	7	Self Tapping Screws	10	8#X3/4"	15	Flat Push Nuts	2	
	8	Self Tapping Screws	2	8#X1.25"				







Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Turn off engine and chalk tires with stop block . Open Hood.	
3	Layout and assemble your Grille Kit. First, you will need to fit the Grille Mount Top Plate to the grille's inner lip located on the top side frame. Use the (8) Serrated Nuts and (8) Flat Washers.	
4	Now you are ready to move onto the removal of vehicle's front bumper fascia.Start under the nose of the vehicle,remove (6) more screws to loosen exterior bottom bumper fascia component.	






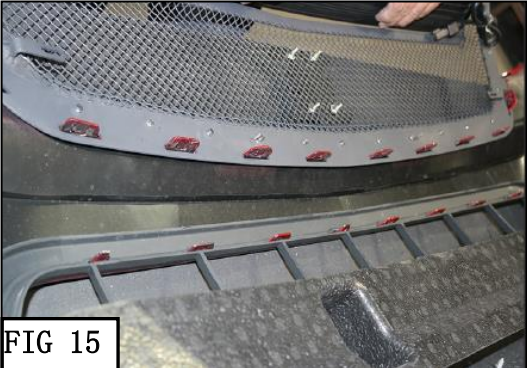


5	Remove (10) screws to loosen and remove wheel well fender liner.
---	--

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03LFC57H	Application	For 2015-2018 Chevy Colorado Not For ZR2
6	In the front wheel well peel back the fender liner to access the (3) 7mm bolts that fix lower bumper to front fender. Bolts can be located inside and behind fender liner. Loosen and remove nuts.		
7	Disconnect plugs to fog lights for both driver and passenger sides of vehicle.		
 <p><b>FIG 4</b></p>	 <p><b>FIG 5</b></p>	 <p><b>FIG 6</b></p>	 <p><b>FIG 7</b></p>
8	Remove (2) bolts located in lower bumper opening behind and underneath. These may be tricky to find so grab a flash light and locate them way up deep inside a small dark plastic shell with hole for your 10 mm socket, long extension, and swivel.		 <p><b>FIG 8</b></p>
9	Remove (6) screws across the top that hangs and secures upper grille shroud.		 <p><b>FIG 9</b></p>

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03LFC57H	Application	For 2015-2018 Chevy Colorado Not For ZR2
10	<p>For this next step, it may be advised to enlist a friend to help pull and remove the front bumper fascia from the rest of the vehicle. It should now be easily freed and loose. You may need to firmly pop free the tabs near the headlights that secure the front fascia to the fenders.</p>		 <p><b>FIG 10</b></p>
11	<p>With the front fascia assembly removed and set down on a flat cushioned surface, use a flat head screwdriver and carefully pry in to release (10) plastic tabs that holds the grille in place and secured to the front bumper fascia. The middle grille piece should now be free and set aside. <b>SEE FIG 11-14.</b></p>		
<div style="display: flex; flex-wrap: wrap;"> <div style="width: 50%; text-align: center;">  <p><b>FIG 11</b></p> </div> <div style="width: 50%; text-align: center;">  <p><b>FIG 12</b></p> </div> <div style="width: 50%; text-align: center;">  <p><b>FIG 13</b></p> </div> <div style="width: 50%; text-align: center;">  <p><b>FIG 14</b></p> </div> </div>			
12	<p>Take assembled grille insert and place over the (10) plastic tabs aligning with the defined holes.</p>		 <p><b>FIG 15</b></p>

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03LFC57H	Application	For 2015-2018 Chevy Colorado Not For ZR2
13	Use (10) Long U-nuts and slide over tabs. You may find it easier to pry open U-Nut with a broad flat head screwdriver to slide over tabs.		<p><b>FIG 16</b></p>
14	Insert provided screws into all placed U-Nuts and using Phillips head screwdriver, screw down and tighten grille replacement to front bumper fascia. It is important to "marry" the grille seamlessly and tightly to the bumper fascia so that you can eliminate any gaps or overlaps visible from the exterior side.		<p><b>FIG 17</b></p>
15	Attach grille support tab brackets to inside grille lip studs and tighten using provided hardware.		<p><b>FIG 18</b></p>
16	Slip on long U-nuts over the end of the support tab brackets that were just attached to new replacement grille.		
17	Take the supplied front mounting brackets, identify drivers side and passengers side and secure to factory bumper support tab using provided hardware. Vehicle Mounting tab locations are found just below headlight units. Slip on long U-Nuts over the end of the front mounting brackets. <b>SEE FIG 19-20.</b>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!


Part#	GR03LFC57H	Application	<b>For 2015-2018 Chevy Colorado Not For ZR2</b>
-------	------------	-------------	---



18 You are now ready to reinstall the front bumper fascia back on the nose of the vehicle. Grab your friend and carefully set it into place.





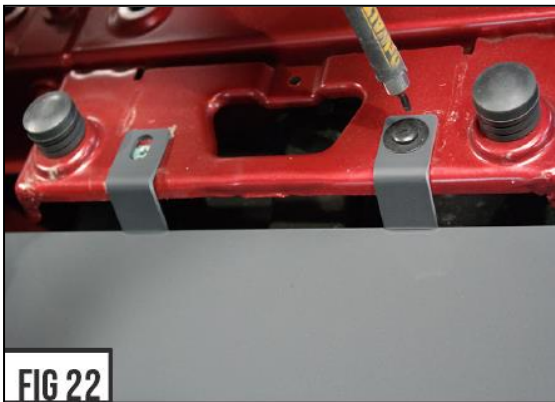


19 Reverse the bumper removal order process to re-install vehicle components. Start by inserting the (6) screws across the top that hangs and secures top grille frame. **SEE FIG 22-23.**





20 Push back into place the front bumper fascia so that the plastic body will meet and sit flush with the front fenders and hug the edge of the head lamps.



The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03LFC57H	Application	For 2015-2018 Chevy Colorado Not For ZR2
21	<p>In the front wheel wells, peel back fender liner to fix the 7mm bolts that secure the lower bumper to front fender. For now leave fender liner loose incase final adjustments are needed.</p>		 <p><b>FIG 25</b></p>
22	<p>Move to the front nose of vehicle and with the (2) bolts previously removed. Re-insert and tighten the (2) bolts located in lower bumper opening behind and underneath. These may be tricky to find so grab a flash light and locate them way up deep inside a small dark plastic shell with hole for your 10 mm socket, long extension, and swivel.</p>		 <p><b>FIG 26</b></p>
23	<p>Locate the tabs behind the grille mesh in the lower corners (where you previously installed the U-Nuts mounting plate onto the support tab bracket). Use the long screws found in your provided hardware kit and run the down fairly tight. <b>SEE FIG 27-28.</b></p>		
24	<div style="display: flex; justify-content: space-around;"> <div data-bbox="115 1161 586 1472">  <p><b>FIG 27</b></p> </div> <div data-bbox="613 1161 1024 1472">  <p><b>FIG 28</b></p> </div> <div data-bbox="1052 1161 1498 1472">  <p><b>FIG 29</b></p> </div> </div>		
24	<p>Plug in the Fog light electrical connection. <b>SEE FIG 29.</b></p>		
25	<p>Under the nose of the vehicle, insert the (6) screws to reattach the exterior bottom bumper fascia component to the vehicle's underbody. <b>SEE FIG 30.</b></p>		
26	<p>Insert screws back into fender liner. <b>SEE FIG 31.</b></p>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03LFC57H	Application	For 2015-2018 Chevy Colorado Not For ZR2
<div style="display: flex; justify-content: space-around;">   </div>			
27	<p>At this point you want to look over your work and examine the gap alignments around all edges and in between the new Grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. Finally confirm grille is tight and secure. Check over all vehicle hardware to proper tightness. Install complete! If adjustment is needed, you can loosen the hardware mounts and shift side to side or up&amp;down to achieve proper look.</p>		
28	<p>Installation completed!!!</p>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!