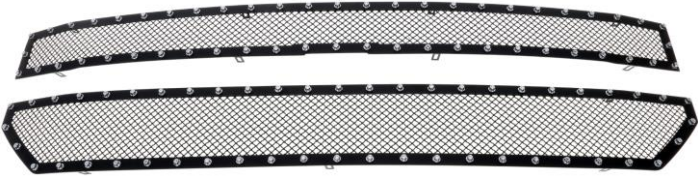

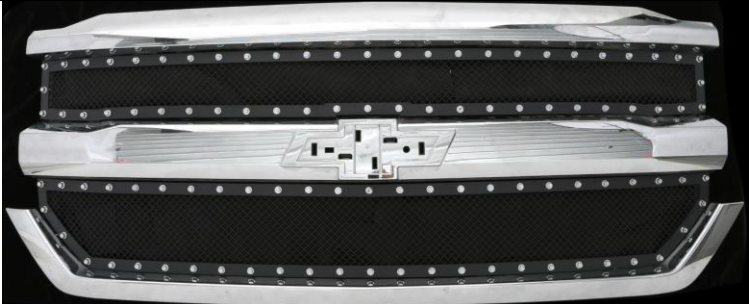


| | | | |
|-------|------------|-------------|--|
| Part# | GR03LFC60H | Application | For 2016-2018 Chevy Silverado 1500 Not For Z71 and High Country Model |
|-------|------------|-------------|--|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-----------|-----|-------------|
| | 1 | Mesh Grille | 2 | Stainless steel | 3 | Screws | 16 | 8#×3/4" |
| | 2 | U-Nuts | 16 | | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. | |
| 3 | Center the grille into the opening of the factory grille shell. Secure the stud to the threaded holes on the front of the grille. Be sure the stud are through the OEM grille shell. Once the grille is centered to your liking mark and drill the mounting holes. | |
| 4 | Secure grille using the U- Nuts from the back side of the OEM grille shell. |  |
| 5 | Make sure the grille is centered and tighten the fasteners, but do not over-tighten. | |
| 6 | Reinstall the black plastic cover which was removed in step 2. | |
| 7 | Installation completed!!! |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!