



PATENT PRODUCT

Grille Installation Instruction

| | | | | | | | | |
|--------------|----------------------------|--------------------|---|--|--|--|--|--|
| Part# | GR04FFC44 C/S/J | Application | <i>For 2015-2018 Dodge Charger (Not for Daytona and RT SCAT Pack and SRT) / 2019 Dodge Charger Only for SXT</i> | | | | | |
|--------------|----------------------------|--------------------|---|--|--|--|--|--|

| | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|-------------------|------|---------------|-----|-----------------|------|---------------------------|-----|-------------|
| Parts List | 1 | Billet Grille | 1 | Stainless steel | 3 | Cross Head Tapping Screws | 8 | 8# x 2.5" |
| | 2 | Flat Tab | 8 | | 4 | U- Clip Nuts | 8 | 8# |

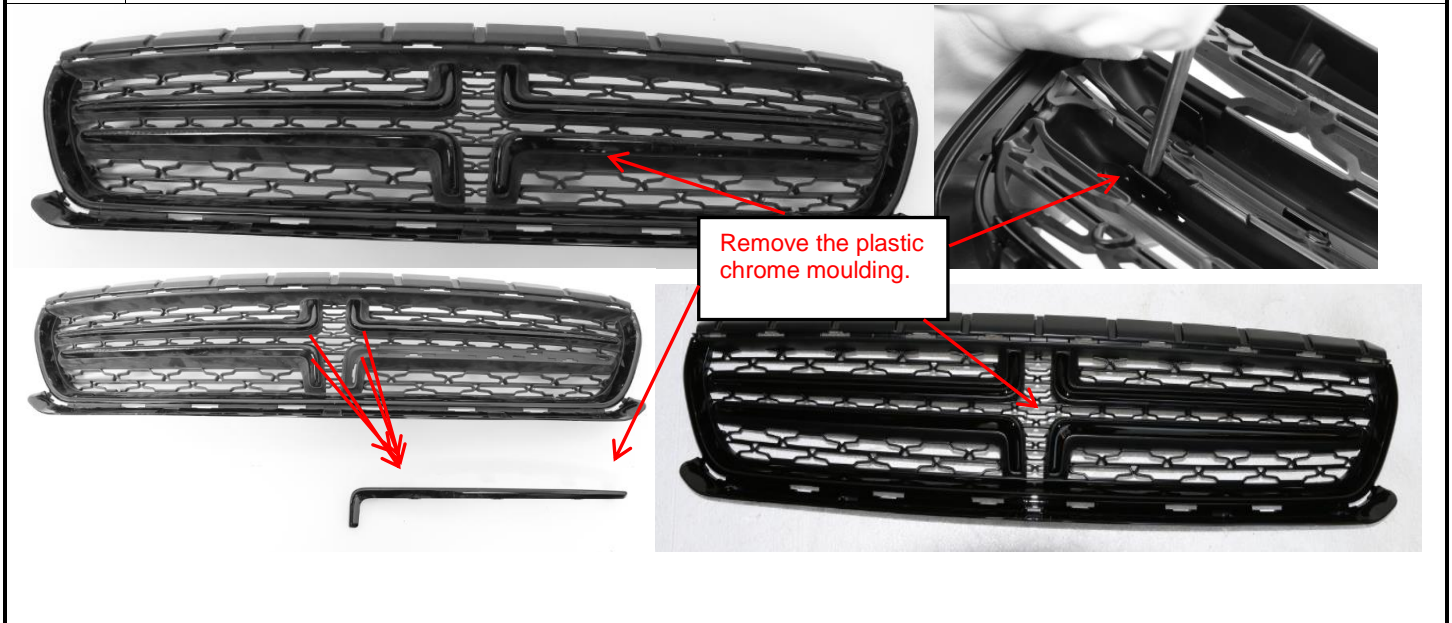
Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|-------------|--------------|
|------|-------------|--------------|

| | | |
|---|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
|---|---|--|

| | | |
|---|---|--|
| 2 | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. | |
|---|---|--|

| | | |
|---|--|--|
| 3 | Remove the four plastic chrome moulding. | |
|---|--|--|



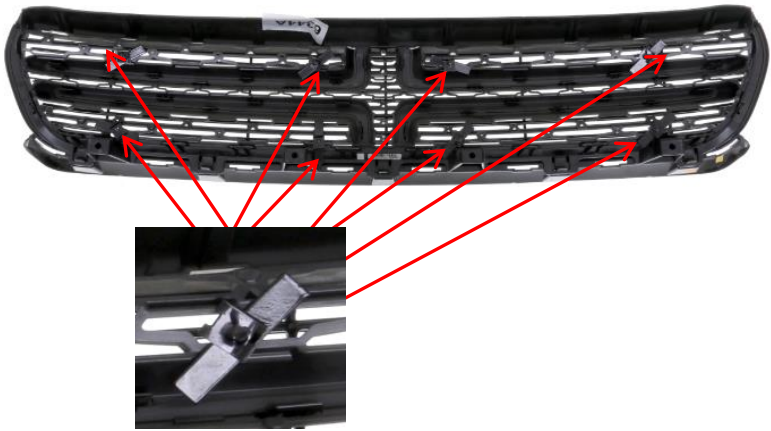

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



PATENT PRODUCT

Grille Installation Instruction

Rev. 190401

| Part# | GR04FFC44 C/S/J | Application | For 2015-2018 Dodge Charger (Not for Daytona and RT SCAT Pack and SRT) / 2019 Dodge Charger Only for SXT |
|-------|--------------------|--|--|
| 4 | | Secure grille using the U-Clip Nut and tabs from the back side of the OEM grille shell. Place screws through welded aluminum tabs on the grille. |  |
| 5 | | Make sure the billet grille is centered and tighten the fasteners. | |
| 6 | | Reinstall the plastic shroud with the fasteners removed in Step 2. | |
| 7 | | Installation completed!!! |  |

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!