




Grille Installation Instruction


Rev. 141001

Part#	GR04GEC16H	Application	05~07 Dodge Magnum Low Bumper (1 PCS) (Except SRT8)				
-------	-------------------	-------------	----------------------------------------------------------------	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	5	Studs	2	6-32×1"
	2	Studs	10	6-32×1.5"	6	Half Flange Brackets	2	
	3	L Hooks	10		7	Plastic Push-In Fasteners	6	
	4	K-Lock Nuts	12	6-32				

Install Notes: Overlay Replacement Drill Cut

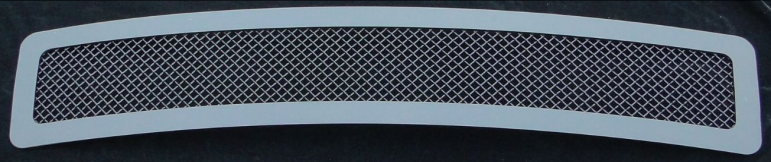Step	Description	Illustration
1	Identify the grille & hardware with parts list.	
2	Open the hood. Test fit the grille over the opening; the grille should have the same shape as the bumper opening. Use a screwdriver to remove the six push in fasteners along the top of the bumper cover (1). Next, remove the two-piece plastic cover assembly behind the four fasteners. Each cover has metal press-in clips securing them in place. Pull up on the covers to remove them. Remove the 7mm bolts that hold the engine splash shield to the bumper cover along the bottom. Behind the grille in each lower corner is a molded flap that is secured to the foam bumper pad. Access these fasteners through the area from the two-piece cover on top. These are a special 1/8" square head design screw.	
3	Remove the three plastic rivets securing the bumper cover to splash shields just below the fender line in each wheel well; 6 total (2). Use a small hammer and punch to remove the center from each plastic rivet. These rivets will be replaced with new hardware. Each end of the bumper cover is secured to the fenders with a 10mm bolt. Pull the wheel well splash shields back and remove the vertical bolt in each corner (3).	

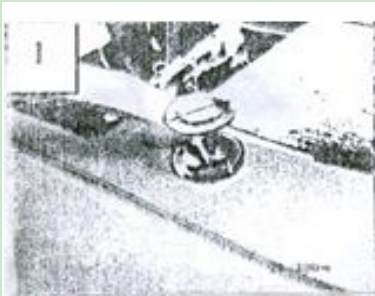

Now the splash shields below the engine must be removed. Note how they interlock; they will need to be re-installed the same way. Remove the nine 7mm bolts along the Bottom. There are two 10mm bolts in the center of this splash shield that must also be removed.

The fog lights (if equipped) must be disconnected and remove from the bumper cover. Gently pull the bumper cover forward about 2" on each side. This will gain access to the lights. Twist each light socket assembly and remove. Now the bumper can be removed. Pull the bumper assembly forward. The foam bumper pad behind the bumper cover does not need to be removed from the vehicle. Remove the factory license plate assembly.

4	Apply masking tape to the face of the bumper cover. Use a jig-saw or die grinder to cut the center cross bars from the lower bumper opening (4). Make you cuts at the base of the bars (4). Use a die grinder or file to clean the cuts (5). Do not cut the lip around the opening (6). Apply a coat of black spray paint to hide the surfaces in the opening (7).
---	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Grille Installation Instruction

Rev. 141001

Part#	GR04GEC16H	Application	05~07 Dodge Magnum Low Bumper (1 PCS) (Except SRT8)
-------	-------------------	-------------	----------------------------------------------------------------



5 Apply a small amount of liquid thread lock to the threaded studs and install into the grille (8). Install the shorter 1" studs on each end. **DO NOT OVER-TIGHTEN THE STUDS; THIS CAN DAMAGE THE FACE OF THE GRILLE.** Center the grille over the bumper opening. The grille will overlap the edge approximately 1/4", Install the "L" hooks and nuts onto the threaded studs along the top and bottom (8). Tighten the hardware with the "L" hooks wrapped around the edge of the opening (9). Install the half flange brackets on the shorter 1" studs located on each end.



6 Re- install and assembly the bumper cover assembly back onto the vehicle. The rivets removed from the wheel wells are not re-usable. Replace the three rivets from each wheel well splash shield with the plastic push-in fasteners supplied in the hardware pack.

7 Make sure the grille is centered and tighten the fasteners.

8 Installation completed!!!

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!