



PATENT PRODUCT

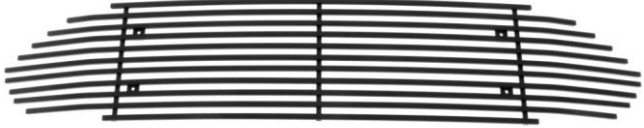

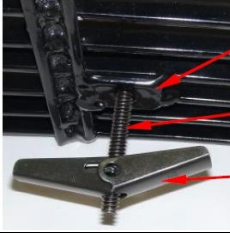
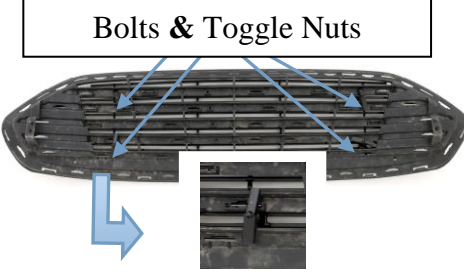
Grille Installation Instruction

Rev. 190401

Part#	GR06FE140 C/J/S	Application	For 2013-2016 Ford Fusion Chrome pcs need to be removed.
--------------	--------------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	1	Stainless steel	3	Bolt	4	6#-32x2"
	2	Toggle Nut	4	6#-32	4			

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: remove the plastic cover on the bottom of the OEM front bumper, which will allow access to the rear of the OEM grille	
3	If your OEM grille shell has chrome bars, please take those bars off from the shell.	 <p style="color: red; font-size: small;">please take off those chrome bars.</p>
4	Insert the screws into the weld tab hole from front side of the billet grille.	<div style="border: 1px solid black; padding: 5px; display: inline-block;">Picture for reference only. This is not actual grille.</div>  <div style="display: flex; flex-direction: column; align-items: flex-end; margin-left: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Weld tab</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Screw</div> <div style="border: 1px solid black; padding: 2px;">Toggle nut</div> </div>
5	Center the billet grille onto the OEM grille. Press & insert the toggle nuts on to the rear of the OEM grille through the gap between the horizontal bars.	
6	Secure the grille using the toggle nuts and screws from the front side of the billet grille with a screw driver.	<div style="border: 1px solid black; padding: 5px; text-align: center; margin-bottom: 10px;">Bolts & Toggle Nuts</div> 
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!