

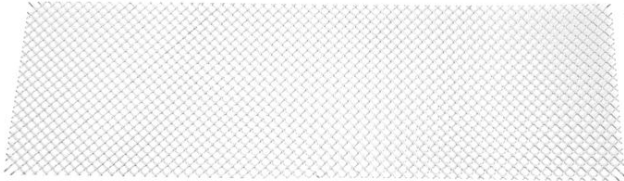


Grille Installation Instruction

Part#	GR06GEC28Z	08-10 Ford F-250/F-350/F-450/ F-550 Super Lower Bumper
-------	------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Lock Washers	2	12.5×6.5×2
	2	Nuts	2	1/4"	5	Flat Washers	2	16×6.5×1
	3	Bolts	2	1/4" × 1"	6	Custom Brackets	2	/

Install Notes: Overlay Replacement Drill Cut

Installation

Step 1	Identify the grille insert & hardware with parts list	
Step 2	Remove the license plate and plate mount from bumper. Remove the plastic clips on lower plastic protector between the grille and radiator(1). (Remove only the two on each side of center clip)	
Step 3:	Place the custom bracket along with the bolts and washer(2) into the holes in which you removed the clips. From the backside of the bumper, place the mesh into the center of the bumper. Rotate the brackets to support the mesh into place. Make sure that the grille is centered and tighten the hardware.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!