

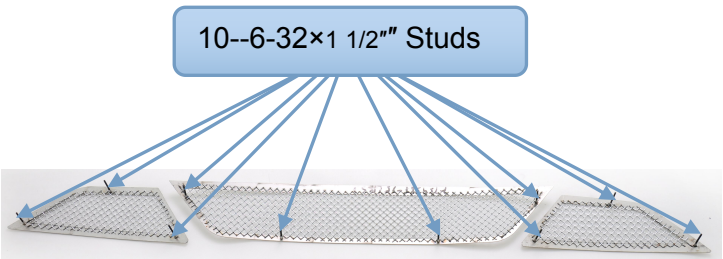
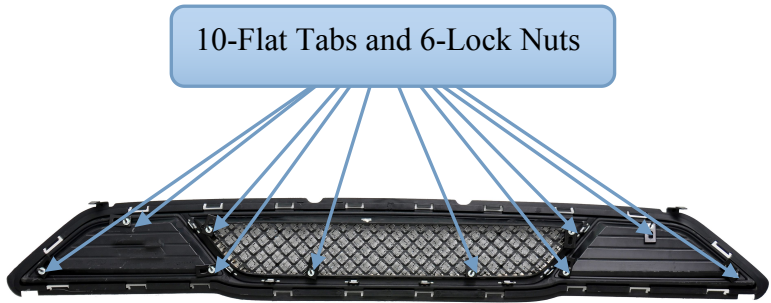



## Grille Installation Instruction

<b>Part#</b>	GR06GEI38T	<b>Application</b>	2013-2014 Ford Taurus SHO Lower Bumper
--------------	------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Mesh Grille	3	Stainless steel	3	Lock Nut	10	6-32
	2	Stud	10	6-32× 1 1/2"	4	Flat Tab	10	/

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	N/A
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Secure the stud to the threaded holes on the rear of the grille.	 <p style="text-align: center;">10--6-32×1 1/2" Studs</p>
4	Center the grille into the opening of the factory grille shell. You need mark and drill six holes. Be sure the studs are through the OEM grille shell.	N/A
5	Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.	 <p style="text-align: center;">10-Flat Tabs and 6-Lock Nuts</p>
6	Make sure the grille is centered and tighten the fasteners.	N/A
7	Reinstall the black plastic cover which was removed in step 1.	N/A
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!