
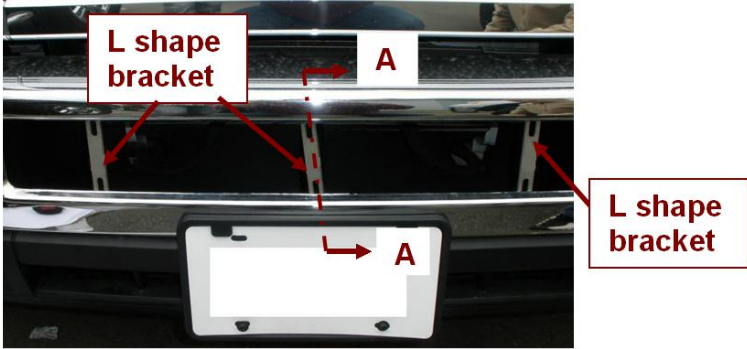
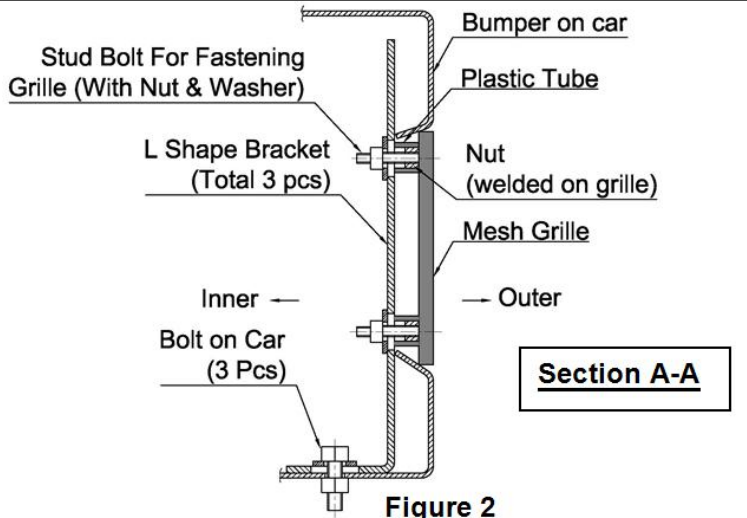


Part#	GR06GFF59T	Application	08- current Ford Econoline Van/E-Series
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Stud Bolts	6	6# × 1 "
	2	Nuts	6	6#	5	L Shape Brackets	3	
	3	Flat Washers	6		6	Plastic Tubes	6	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Open the hood to allow access to the rear of the bumper. Test fit the mesh insert into the factory bumper opening. Use 3 bolts on car to fasten 3 L shape brackets. Figure 1 is showing the location of the brackets.	 <p style="text-align: center;">Figure 1</p>
3	Put the stud bolts into the nut welded on the rear of the grille. Fasten the grille to the L brackets with 6 stud bolts, washers & nuts. Put the rubber tube between grill and L brackets, see figure 2.	 <p style="text-align: center;">Figure 2</p>
4	Be sure the grille is centered and tighten but do not over-tighten the hardware.	
5	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!