



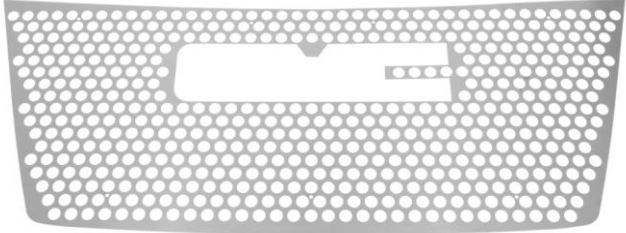
Grille Installation Instruction

Rev. 180701

Part#	GR07DFG43S	Application	For 2010-2015 GMC Terrain 1 PC With Logo Show
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Bolts	7	8 -32×1 1/4"
	2	Wrench	1		4	K-Lock Nuts	7	8-32
	3	Washers	7					

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and re-attach after installation.	
3	Center the grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
4	Place one bolt through each of the holes on the grille. From the rear, place a washer on each screw. Now thread a nut on each bolt. Then use the wrench to thread a bolt on the grille.	
5	Make sure the grille is centered and tighten the fasteners. But do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

[View other car and truck custom grilles made by APG on our website.](#)