



# PATENT PRODUCT



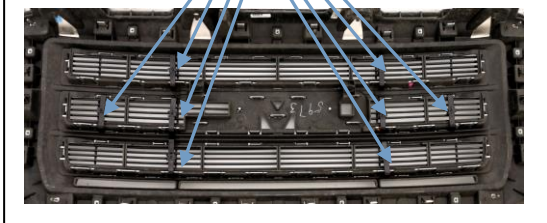

## Grille Installation Instruction

Rev. 190701

<b>Part#</b>	GR07FEI72 C/J/S	<i>Application</i>	For 2014-2015 GMC Sierra 1500 Not For Denali And All Terrain Package
--------------	--------------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	4	Stainless steel	3	U-Clip Nut	8	8#
	2	U-Tab	8		4	Screw	8	8#x1 1/4"

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Install the u-clip nuts onto the U-Tab.	
4	Center the (4) billet grilles onto the factory grille. Insert screw through the weld tab hole on the billet grille from front side. And then secure the grilles with the 8# screws and U-Tab(with U-clip nuts). Be sure the screws are through the OEM grille shell.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">U-Tab &amp; Screws &amp; U-Nuts</div> 
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!