
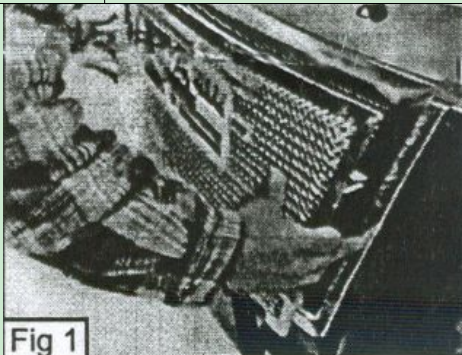
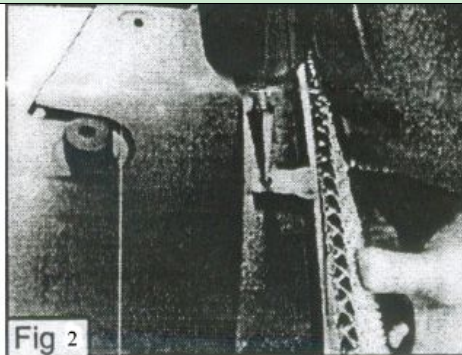
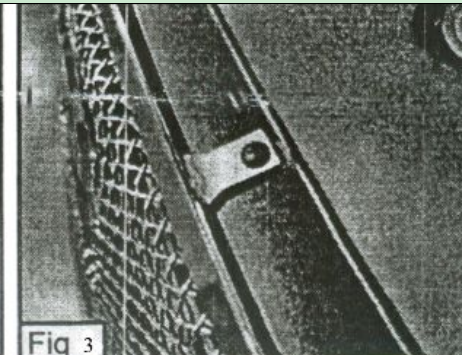


Part#	GR07GFG43H	Application	2010 GMC Terrain Overlay / Bolt-On W/Logo Opening					
-------	------------	-------------	---	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	5	Truss Socket Tapping Screws	3	8# × 1"
	2	"U" Tabs	2		6	Studs	4	6-32×2"
	3	3-Hole Tabs	1		7	K-Lock Nuts	4	6-32
	4	Flat Nuts	3	8#				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Loosen the radiator top cover and side covers. There are several plastic pop clips that you can pry up with a flathead screwdriver and bolts that require removal. This will allow you to get your hand behind the factory grille to install the hardware.	
3	With the top radiator covers loose you can now install the mesh grille. First place mesh grille into the factory grille opening (Fig 1). Thread a stud in each nut welded to the grille. From the rear, place a tab on each screw. Then thread a nut on each screw. Now on the very top of the mesh grille are three metal tabs with holes in them pointing rearward, you will drill a small hole through the plastic under the tab where the hole is (Fig 2). Now insert the three #8 screws through the tabs and the hole you just drilled and from underneath the plastic where you drilled install the three #8 nut plates (Fig 3). Tighten with a phillips screwdriver.	
	  	
4	Reinstall the hardware in the radiator covers. Installation complete!	N/A
5	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!