



# PATENT PRODUCT


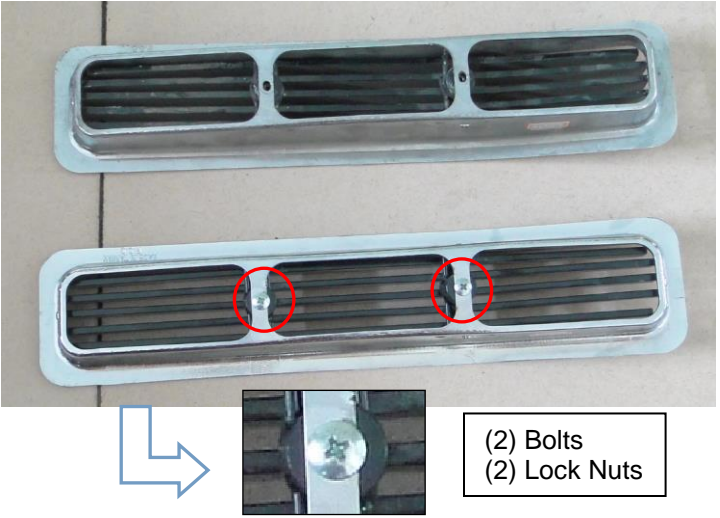
## Grille Installation Instruction

Rev. 190301

<b>Part#</b>	GR10HED90 C/S/J	<b>Application</b>	<b>For 1997-2006 Jeep Wrangler With Chrome Shell Model</b>
--------------	--------------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	7	Stainless steel	3	Bolt	14	6-32X1"
	2	Lock Nuts	14	6-32				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Remove grille shell assembly from front shell. Cut and remove factory grille chips out from shell.	
4	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell. Drill a rectangle hole at the middle of each support bar behind of shell.	 <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>(2) Bolts (2) Lock Nuts</p> </div>
5	Fasten billet grille on grille shell with screws provided.	
6	Inlay grille shell into front shell.	
7	Do same steps to other billet grilles.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!