



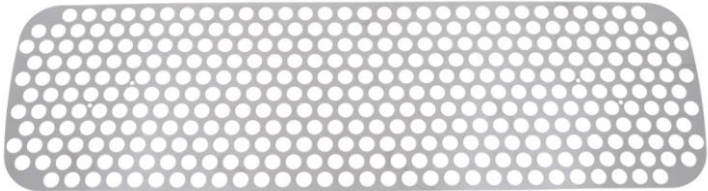
Grille Installation Instruction

Rev. 180701

Part#	GR14DED13S	Application	For 2004-2007 Nissan Armada/ 2004-2015 Nissan Titan
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Truss Head Screws	4	8 -32×2"
	2	Washers	4		5	Wrench	1	
	3	'J' Hooks	4		6	K-Lock Nuts	4	8-32

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Remove the grille from the box. Test fit the grille to make sure that it fits in the shell properly. Make sure the grille is centered.	
4	Place one screw through each of the holes on the grille. From the rear, place a 'J' hook and a washer on each screw.	
5	Now thread a nut on each screw. Then use the wrench to thread a screw on the grille.	
6	Make sure the grille is centered and tighten the fasteners. But do not over-tighten.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!