
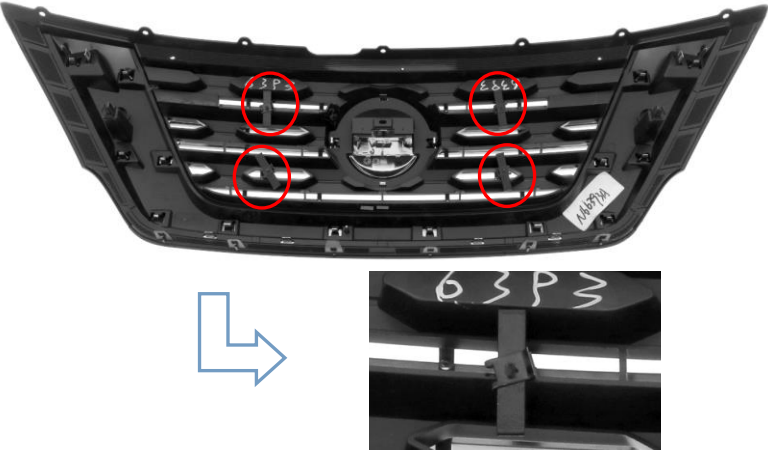





PATENT PRODUCT

Grille Installation Instruction

Rev. 190101

Part#	GR14FFC93C/S/J		Application	For 2017-2019 Nissan Pathfinder with logo show Main Upper				
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	3	U-Nut	4	8#
	2	Screw	4	8# x 2"	4	Flat Tab	4	
Install Notes: Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input type="checkbox"/> Cut <input type="checkbox"/>								
Step	Description				illustration			
1	Identify the grille & hardware with parts list.							
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.							
3	Hold the grille up to the opening of the factory shell. Place the screw to the holes on front of the grille. Be sure the screws are through the OEM grille shell.							
4	Secure the grille using the flat tab and U-nut from the back side of the OEM grille shell.							
5	Make sure the grille is centered and tighten the fasteners.							
6	Reinstall the black plastic cover which was removed in step 2.							
7	Installation completed!!!							

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Looking for dependable car and truck custom grilles? Rely on APG for quality and long-lasting products.