



PATENT PRODUCT


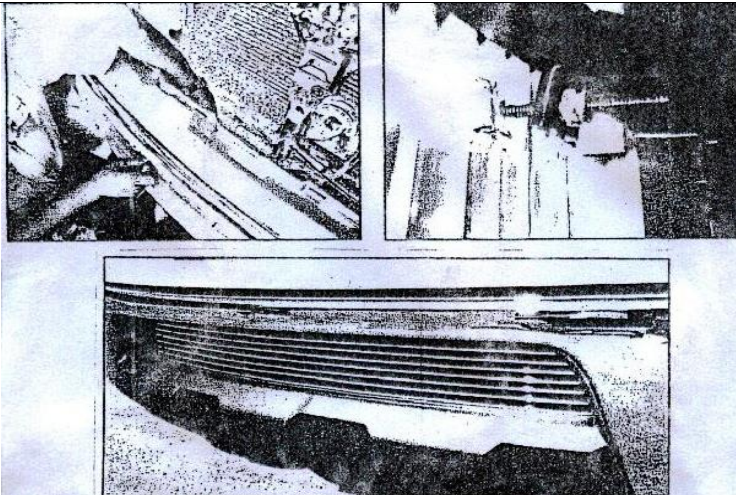
Grille Installation Instruction

Rev. 180401

| | | | |
|--------------|----------------------------|--------------------|---|
| Part# | GR14FFD33 C/J/S | Application | For 2005-2008 Nissan Frontier All Model/ 2005-2007 Nissan Pathfinder/ 2009-2018 Nissan Frontier (Only Fit Model With Chrome Bumper Not Fit Pro-4X Model) |
|--------------|----------------------------|--------------------|---|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|-------------------|------|---------------|-----|-----------------|------|-------------------|-----|-------------|
| | 1 | Billet Grille | 1 | Stainless steel | 4 | Truss Head Screws | 2 | 6-32×2" |
| | 2 | 'J' Hooks | 2 | | 5 | Nylon Lock Nuts | 2 | |
| | 3 | Flat Washers | 2 | | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|-------------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. | |
| 3 | Remove the six fasteners holding the top of the grille in place. Pull the grille forward to access the mounting clips on each end; use a slotted screwdriver to unclip the two fasteners on each side. Now remove the grille by depressing the six clips holding the grille to the bumper cover. | |
| 4 | Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell. | |
| 5 | Install a machine screw into each mounting hole. From the back slide a J hook bracket and washer onto each machine screw. Thread the Nylon Lock nuts onto the screws by hand. Center the billet into the bumper opening. Make sure the J hooks wrap around the grille mesh. Use a screwdriver and wrench to tighten the hardware. Do not over-tighten the hardware. |  |
| 6 | Reinstall the black plastic cover which was removed in step 2. | |
| 7 | Installation completed!!! | |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!