
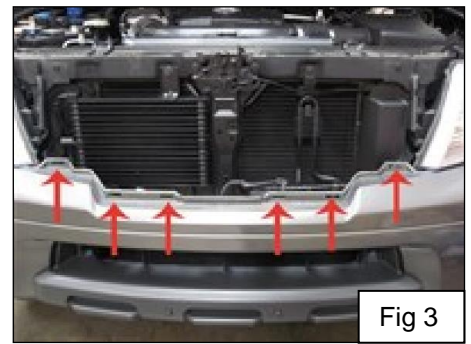


| | | | |
|-------|------------------|-------------|---|
| Part# | GR14GFD13 T/H | Application | For 2009-2019 Nissan Frontier Lower Bumper Only With Painted/Plastic Bumper |
|-------|------------------|-------------|---|


| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-----------|-----|-------------|
| | 1 | Mesh Grille | 1 | Stainless steel | 3 | Clip Nut | 3 | 8# |
| | 2 | Screws | 3 | 8# × 1/2" | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|--|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Remove the plastic clips along the top of the factory grille shell.(Fig 1) | |
| 3 | The clips are released using a Flat-head screwdriver as shown.(Fig 2) | |
| 4 | To remove the grille shell, there are 6 clips that need to be released. While pulling the grille shell towards you, release each clip one at a time from one side to the other.(Fig 3) | |




| | |
|---|---|
| 5 | The lower clips on the grille shell need to be pushed upward slightly to release.(Fig 4) |
| 6 | With all clips released, the grille shell should come off like so, pulling away from the vehicle.(Fig 5) |
| 7 | Next you'll need to remove the lower splash guard underneath the front bumper held on by 10mm bolts.(Fig 6) |

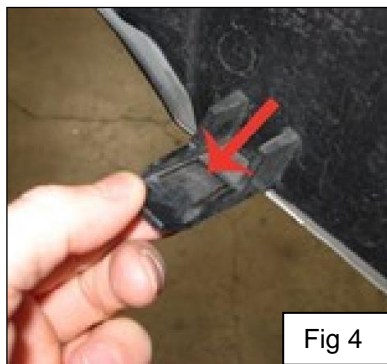



The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!


| | | | |
|-------|------------------|-------------|---|
| Part# | GR14GFD13 T/H | Application | For 2009-2019 Nissan Frontier Lower Bumper Only With Painted/Plastic Bumper |
|-------|------------------|-------------|---|

- 8 Next you'll need to remove the clips on the upper side of the bumper opening. These clips are the same type as the ones holding the upper portion of the grille shell to the vehicle.(Fig 7)
- 9 With the mesh grille placed into the bumper opening, mark the locations of the mounting tab center holes using a scribe tool.(Fig 8)
- 10 At the marked locations, Drill 3/16 inch holes for the mounting screws.(Fig 9)

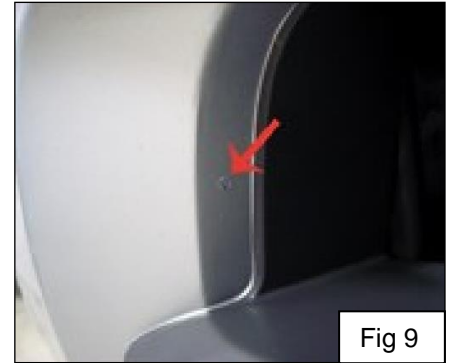

- 11 Once drilled, the holes should look like so.(Fig 10)
- 12 With the mesh insert back into the bumper, secure the insert with the provided hardware. It's easiest to thread the screws into the flat-nuts and tighten them once they are all in together.(Fig 11)
- 13 For the center tab, place the screw through the insert and bumper, then thread the flat-nut onto the screw. From the top, you can secure the screw completely- Be sure not to over-tighten.(Fig 12)

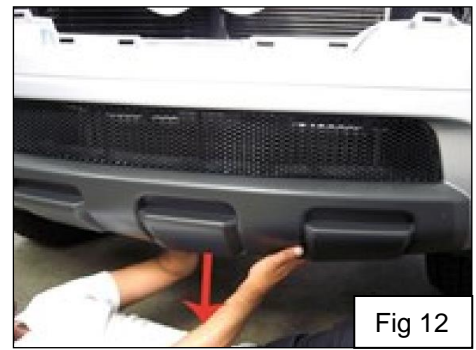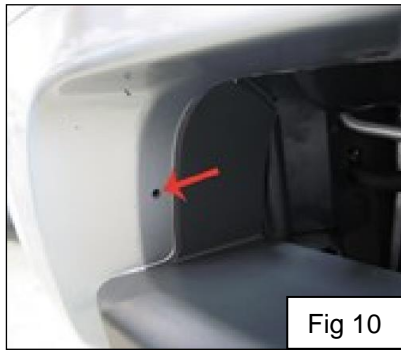

- 14 The screws on the sides should be mounted as so with the flat-nut right behind to tighten.
 

- 15 Installation completed!!!

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!