
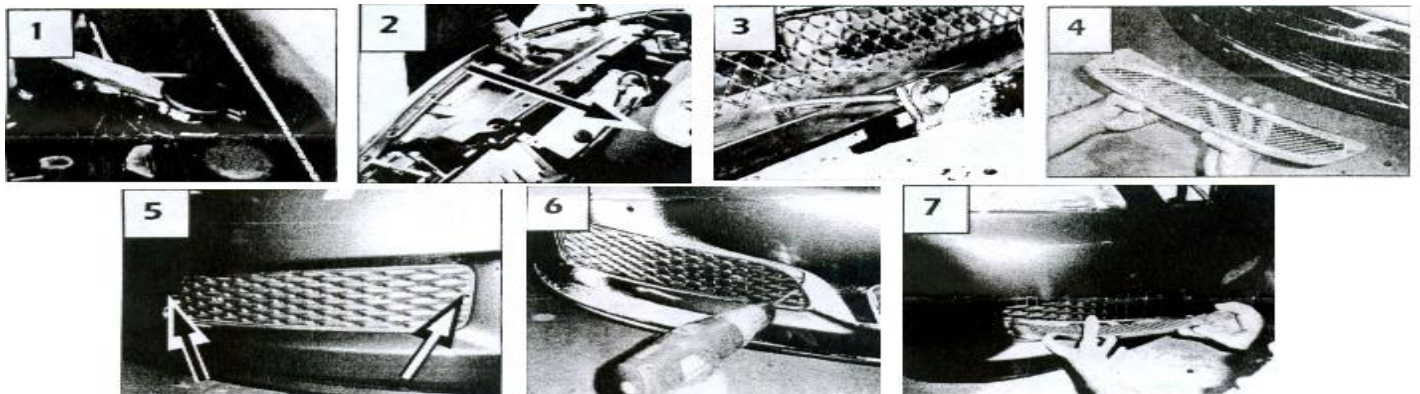


Part#	GR14GFE84T	Application	07~08 Infiniti G35 (4 Door Sedan) Low Bumper (Not For Sport 6MT)					
-------	------------	-------------	---	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	3	Stainless steel	4	Keq Nuts	5	6-32
	2	Studs	3	6-32×2 1/2"	5	Washers	5	
	3	Studs	2	6-32×1"	6	L Brackets	3	

Install Notes: Overlay Repl ent Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	The upper grille must be removed to install the bumper grilles. Identify the correct locations for the three grilles. Remove six plastic fasteners along the top of the grille; use a small screwdriver to pull the center from each fastener (1). Remove five 10mm bolts securing the radiator cover. Remove two 10mm bolts securing the coolant overflow tank; slide it back for clearance (2). Next, push the radiator cover back; depress the clips securing a wiring harness to the cover, remove (2). Remove five 10mm nuts behind the grille. Depress the molded clips retaining the grille and remove from the front.	
4	Thread a stud in each nut welded to the grille. Place the center grille into the bumper opening. Install the L brackets, washers and nuts to secure the grille; wrap the L bracket around the plastic lip in the opening (3). Tighten the hardware until the grille is held securely in place.	
5	Test fit one of the end grilles over the factory bumper insert (4). An angled tab installs on the out edge; a threaded stud installs towards the center. Two holes are required in the factory inserts to install these grilles (5); one for the tab and one for the stud. Drill a 1/4" hole for the angled tab first. Slide the angled tab into the holes; rotate the grille so the threaded stud contacts the factory insert. Mark the location for the hole; remove the grille. Drill a 1/4" hole for the stud (6). Install the angled tab on the end (7); then rotated the threaded stud into the mounting hole. Secure a washer and nut from the rear. Repeat installation process on the other grille.	
6	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
7	Re-install the wiring harness and radiator cover. Secure the coolant overflow tank.	
8	Installation completed!!!	



The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!