



PATENT PRODUCT

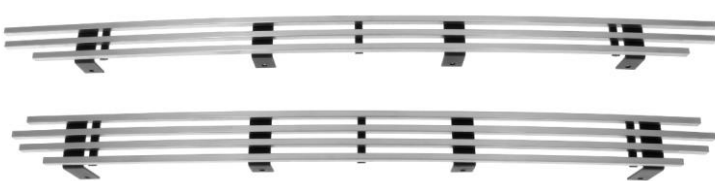
Grille Installation Instruction

Rev. 180501

Part#	GR14HED19C/J	<i>Application</i>	For 2001-2004 Nissan Frontier
--------------	---------------------	--------------------	--------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	2	Truss Head Screws	8	8×3/4"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Place the LOWER billet insert in the lower factory opening so that the four brackets are on the bottom .Center the billet, hold in place and install a screw in each of the four brackets in rear of the billet insert.	
4	Repeat the instructions in Step 3 on the UPPER billet insert.	
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Looking for dependable car and truck custom grilles? Rely on APG for quality and long-lasting products.