

3

Flat Nuts

Grille Installation Instruction

Rev. Date 121220

rail#	GRIOGECOUX		11- On Chrysler 3007 300C Main upper						
	Item	Part Nan	ne	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Mesh Grille		1	Stainless steel	4	Lock Nuts	4	6-32
	2	Screws		4	8#×3/4"	5	Flat Washers	4	Φ25×Φ5×1

6

Install Notes: Overlay \times Replacement $\sqrt{}$ Drill $\sqrt{}$ Cut \times

8#

4

2D18CECOOV 11 On Chrysler 200 / 200C Main upper

Installation

Step 1 Identify the grille insert & hardware with parts list





Step 2-1: Pop hood, Remove 8 clips on the Plastic Cover



Step2-2: Remove 2 clips on side Fender Well





Step 2-3: Remove 10mm Bolt on the inner Fender



<u>Step 2-4: Remove 7 Screws from Underneath</u> of the Factory Front Bumper

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.



Grille Installation Instruction

Rev. Date 121220

Part#

Step 3: Factory Grille Removal GR18GFC00X

11- On Chrysler 300 / 300C Main upper



Step 2-5: Pull Side Fender outward to Unclip.



Step2-6: Remove 8 (7mm) Screws from Underneath the Factory Grille Shell.


Step2-7:Remove Grille Shell and unclips the Electric Wire from the Fog Lights.



Step3-1: Remove 2 Clips on the Bumper Support.



Step3-2:Remove 2 Screws on the corners of the Grille Shell.

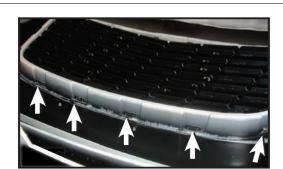

Step3-3:Remove 11 Clips around the Grille Shell.

<u>Step3-4:Remove Factory Grille.(grille will come out forward</u>

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.



Grille Installation Instruction

Rev. Date 121220

Part#

GR18GFC00X

11- On Chrysler 300 / 300C Main upper



<u>Step4-1:Unclip the Factory Grille from around the Chrome Frame.</u>



Step4-2:Unclip the Chrysler Logo.

Step 4: Grille Installation

<u>Step4-3:Place Mesh Grille over the Factory Grille Shell.</u>



Step4-3:Insert Fender Flat washers along the top of the Screws on the mesh Grille, Tight with Lock Nuts.



Step4-4:Drill a 3/16 Hole through the Brackets on the side and bottom of the Mesh Grill.



Step4-5: Place a #8 Flat Nut on the outer edge on the bracket and thread with a #8 Screw.

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.



Grille Installation Instruction

Rev. Date 121220

Part#	GR18GFC00X	11- On Chrysler 300 / 300C Main upper					
	Step4-6: Re-Assemble Bumper Support, Clips and bolts.						
Installation Completed!!	N/A						

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.