






Grille Installation Instruction

Part#	GR18GFH72T	Application	For 2011-2014 Chrysler 200
-------	------------	-------------	----------------------------

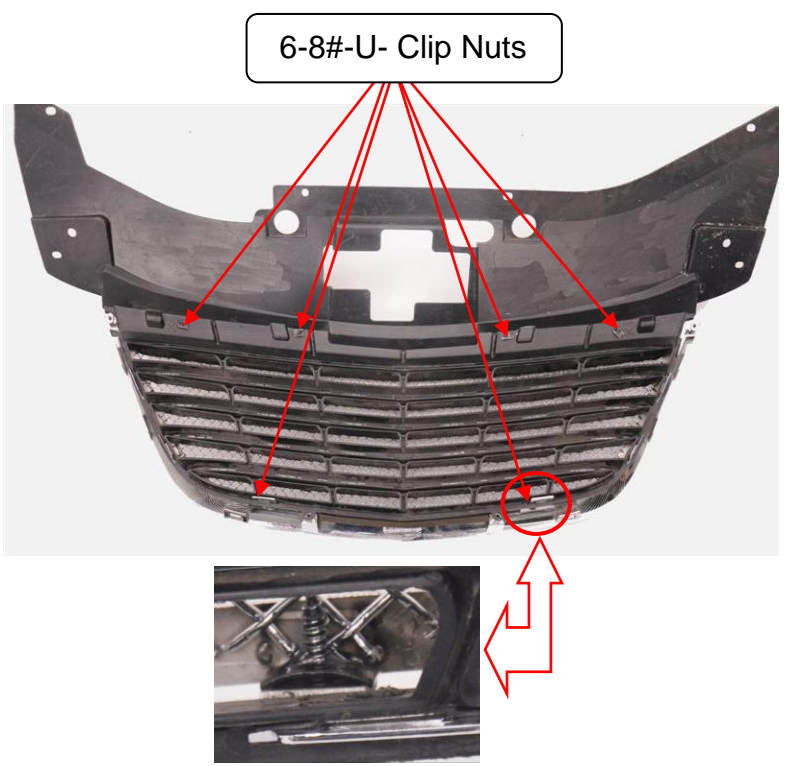

Parts List	Item	QTY	Part Name	Description	Item	QTY	Part Name	Description
	1	1	Mesh Grille	Stainless steel	3	6	U- Clip Nut	8#
	2	6	Screw	8#×3/4"	4			

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Remove the plastic electroplating article decoration and cut off part of the black plastic.	 Cut Out the Black Trim
4	Center the grille into the opening of the factory grille shell. You need mark and drill six holes. Be sure the screws are through the grille shell.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our

Grille Installation Instruction

Part#	GR18GFH72T	Application	For 2011-2014 Chrysler 200
5	Secure the grille using the U- Clip Nuts from the back side of the OEM grille shell.		
6	Make sure the grille is centered and tighten the fasteners.	N/A	
7	Reinstall the black plastic cover which was removed in step 1.	N/A	
8	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our