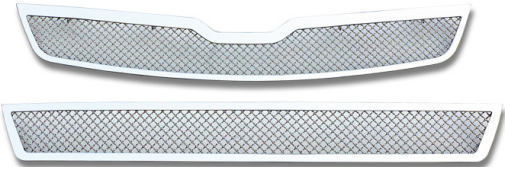

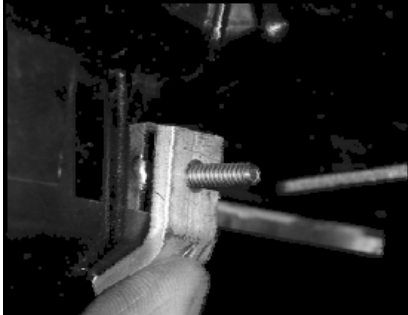
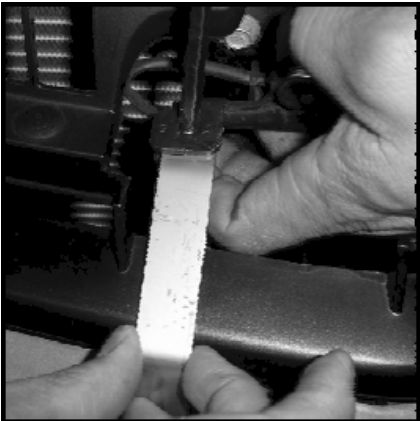


Part#	GR19GFF00T	Application	08-10 Saturn Vue (Upper + Bumper)
--------------	------------	--------------------	-----------------------------------

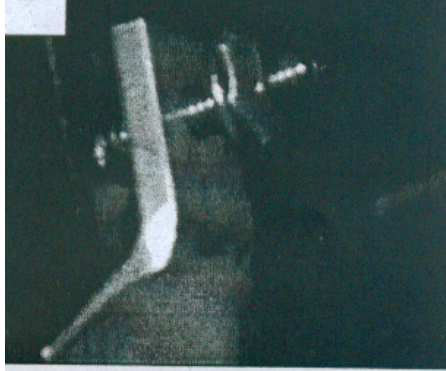

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	2	Stainless steel	5	Screw	1	6-32x 1/2
	2	Custom Hood Release	1	/	6	Washer	1	6#
	3	Nylon Lock Nut	5	6-32	7	Stud	3	6-32X1 1/2
	4	angle bracket	4	145°		L Bracket	3	1/2" X 1/2"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the retaining clips from the top of the plastic engine cover to gain access to the rear of the grille. Locate the center of the factory hood pop latch. Mark the center of the square finger hood pop and drill a 1/8" hole.	
3	Center the grille into the opening. From the rear of the grille; use the provided angle brackets and nylon nuts. Make sure the brackets hold to the factory grille. DO NOT OVERTIGHTEN.	
4	Install the new hood latch extension. Place the new extension on the bottom side of the factory hood release. While holding the extension in place; place the machine screw through factory hood latch, into the new extension and into the provided washer and nylon lock nut. Tighten the hardware.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR19GFF00T	Application	08-10 Saturn Vue (Upper + Bumper)
--------------	------------	--------------------	-----------------------------------

Step	Description	illustration
5	Secure the studs on the weld nuts on the rear of the lower bumper mesh grille.	
6	Locate the new bumper insert. Place the insert into the bumper opening. From behind the grille place an L Bracket and 6-32 nylon lock nut on each of the studs. Make sure that the L brackets wrap around the plastic on the factory bumper.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!