
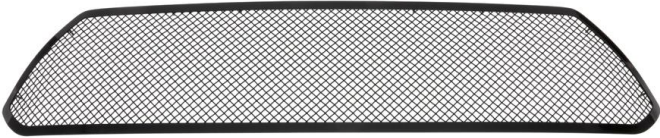



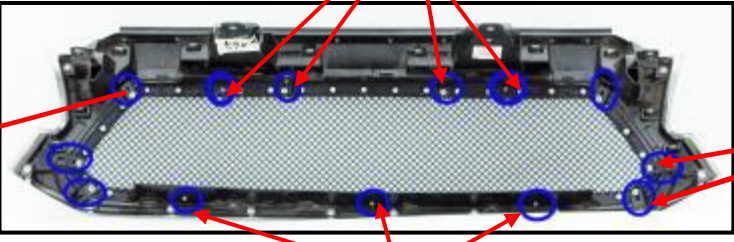


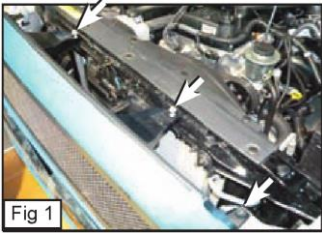

Part#	GR20GF171T/H	Application	For 2012-2015 Toyota Tacoma
-------	--------------	-------------	-----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	5	100° L Brackets	4	/
	2	Lock Nut	13	0.138-32	6	70° L Brackets	3	/
	3	Lock Nut	7	M4	7	135° L Brackets	6	/
	4	Bolt	7	M4x20mm				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove 2 bolts and 1 clip along the top of the factory grille.(Fig 1)	
3	With a dye grinder, cut along the factory grille to remove grille. (Fig 2)	
		  
4	Position the Grille onto grille shell cavity .	
5	Mark locations for drilling on the shell through the other hole on the "L" brackets, then remove the brackets and drill holes on these locations. Attach the grille to the shell by inserting the screws through the holes of L Brackets and the holes on the shell, and then secure them with flange nuts provided.	<p>Use 100° L Brackets</p>  <p>Use 70° L Brackets</p>  
6	Place grille back onto the Truck.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!