



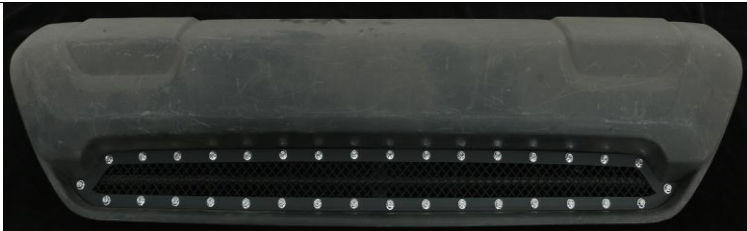


Grille Installation Instruction

Part#	GR20LFI38H	Application	For 2012-2015 Toyota Tacoma (Not For X-Runner)
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Stud	6	10# - 24*2"
	2	Screw nut	6	10#-24	4	2-holes Tabs	3	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Center the grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
4	Now remove the radiator cover plate (Fig 3.4) this will give you access to the rear of the factory grill.	
5	Take the two bone brackets and reach down behind the mesh grille and insert them onto the threaded studs on the back of the mesh grille.	
6	Slide the washers over the threaded studs along with the nylon lock nuts and tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!