


PARTS LIST:

Item	QTY	Description	Item	QTY	Description
#01	1	Drive Side Bar	#10	6	M8 U-Bolt
#02	1	Passenger Side Bar	#11	12	M8 Hex Bolt
#03	1	Driver Side Front Mounting Bracket (DFM)	#12	24	M8 Hex Nut
#04	1	Passenger Side Front Mounting Bracket(PFM)	#13	24	M8 Lock Washer
#05	1	Driver Side Center Mounting Bracket(DCM)	#14	36	M8 Flat Washer
#06	1	Passenger Center Mounting Bracket(PCM)	#15	12	M6 Square Head Bolt
#07	1	Driver Rear Mounting Bracket (DRM)	#16	12	M6 Nylon Lock Nut
#08	1	Passenger Rear Mounting Bracket (PRM)	#17	12	M6 Flat Washer
#09	6	Clamp Plate			

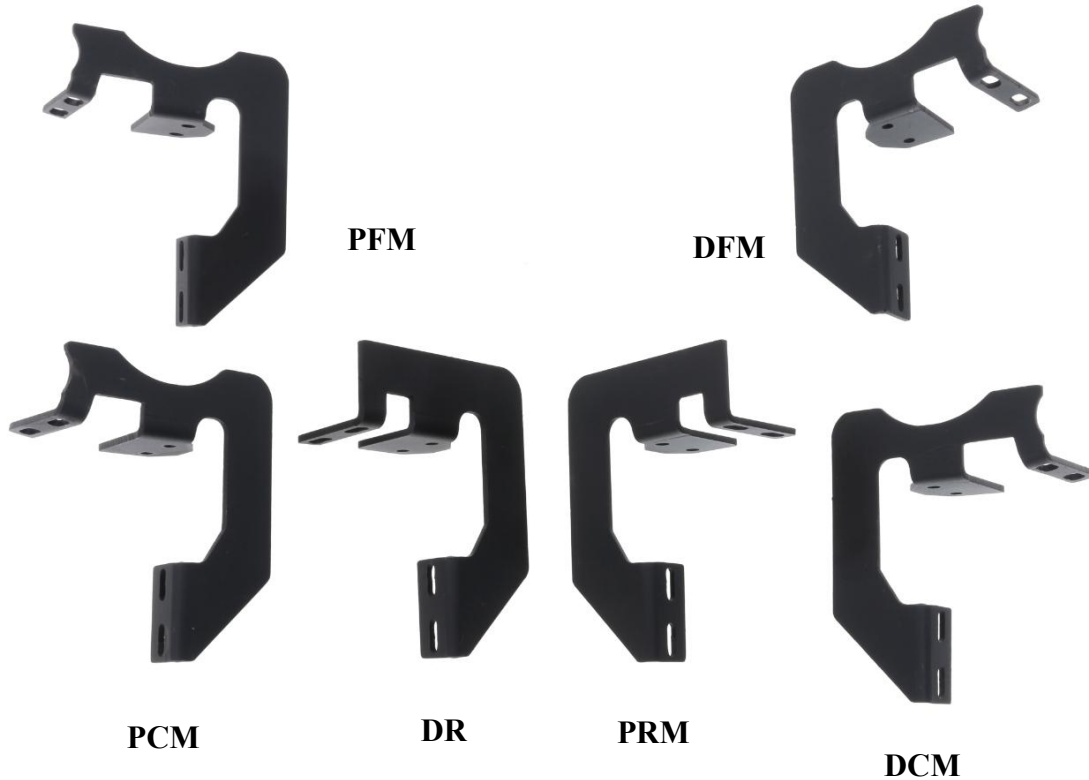

INSULATION INSTRUCTION:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

1. From the driver side of vehicle, locate the two factory holes above the front, center and rear rubber grommets in the side panel (**Figure 1**).
2. Starting from the front, insert the short end of one of the M8 U-Bolts into one of the factory holes and out from the opposite hole (**Figure2**).
3. Attach the driver side front Mounting Bracket with the previously inserted M8 U- Bolt.**NOTE:** Hold the U-Bolt in place and line up the threaded ends with the slots in the Mounting Bracket. Do not let the U-Bolt fall into the body panel. Secure Mounting Bracket to U-Bolt using (2) M8 Lock Washer,(2)M8 flat Washers and (2) M8 hex nuts,(Figure 3).Finger tighten.
4. Position one of the clamp Plates over pinch weld and Mounting Bracket.**NOTE:** Mount the clamp plate with the concave facing the inside of the vehicle,(**Figure 4**).Partially attach the clamp plate to the Mounting Bracket using the included(2) M8x40mm Hex Bolts,(2)M8 Lock Washers,(4)M8 Flat Washers and (2) M8 Hex Nuts,(**Figure 5-7**).Finger tighten.
5. Repeat steps 3-4 for rear and center Mounting Bracket installation (**Figure 5-7**).

6. Select the Running Board. Slip (6) 6mm T-Bolts into each bottom channel (Figure 8). Carefully position the Running Board onto the (3) Mounting Brackets. Attach the Running Board to the Mounting Brackets with (6) 6mm T-bolts,(6)6mm flat washers and (6)6mm lock nuts, (Figure 9). Do not tighten hardware.
7. Adjust the Side bar properly and tighten all hardware at this time.
8. Repeat steps 2-7 for passenger Sidebar installation.
9. Do periodic inspections of the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For Polished Finishes: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

For black finishes: Mild soap may be used to clean the Running Board.