


1B(5",4")RUNNING BOARD
 02-16 AVALANCHE 1500/00-15 SUBURBAN 1500/00-15 YUKON XL 1500
 INCLUDES 02-06 AVALANCHE WITH LOWER BODY CLADDING
 EXCLUDES 00-06 SUBURBAN WITH CLADDING AND TUBE STEPS
 EXCLUDES 00-06 YUKON XL DENALI WITH BODY MOLDING

PARTS LIST:

| Item | QTY | Description | Item | QTY | Description |
|------|-----|---|------|-----|---------------------------------------|
| #1 | 2 | Running Board(use for left or right) | #6 | 1 | Driver/Left Rear Mounting Bracket |
| #2 | 1 | Driver/Left Front Mounting Bracket | #7 | 1 | Passenger/Right Rear Mounting Bracket |
| #3 | 1 | Passenger/Right Front Mounting Bracket | #8 | 12 | 6-1.0mm x 20mm T-Bolts |
| #4 | 1 | Driver/Left Center Mounting Bracket | #9 | 12 | 6mm x 22mm OD x 2mm Flat Washers |
| #5 | 1 | Passenger/Right Center Mounting Bracket | #10 | 12 | 6mm Lock Nuts |

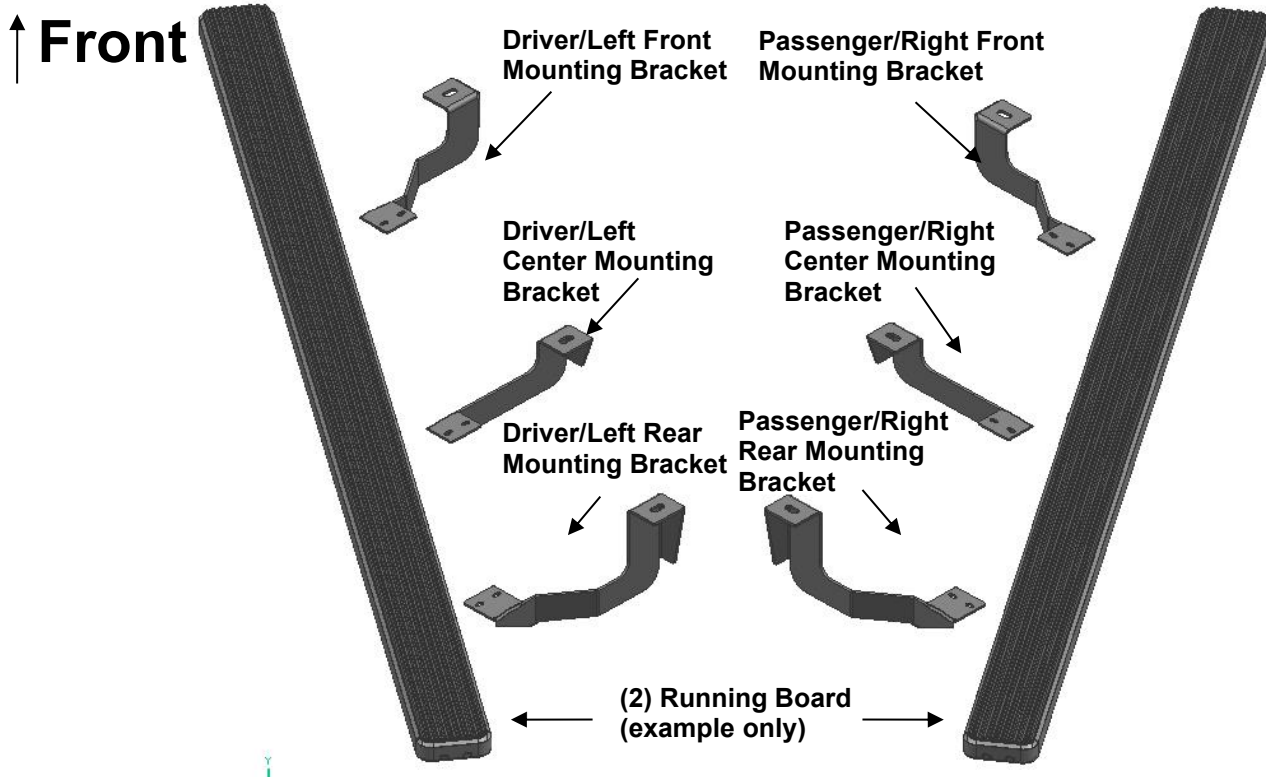

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. ON MODELS WITH DEF TANK, SELECT A FLAT, LEVEL AREA FOR INSTALLATION.
2. Start the installation under the passenger side of the vehicle. Remove the front body mount hex bolt, (Figures 1 & 2). Do not remove the rubber bushings.
3. Hang the passenger side front Mounting Bracket from the body mount using the long factory hex bolt, (Figures 1 & 2). Do not fully tighten hex bolt at this time.
4. Repeat Steps 1 & 2 for passenger side center and rear Bracket installation, (Figures 1 & 2). Adjust the Brackets so that they cannot come in contact with the factory steel body mount welded to the frame.
5. Select the Running Board. Slip (12) 6mm T-Bolts into each bottom channel (Figure 3). Carefully position the Running Board onto the (3) Mounting Brackets. **IMPORTANT:** Do not slide the Running Board on the Brackets or damage to the finish may result. Attach the Running Board to the Mounting Brackets with (2) 6mm T-bolts,(2)6mm flat washers and (2)6mm lock nuts, (Figure 4). Do not tighten hardware.
6. Level and adjust the Running Board and tighten all hardware. Make sure that there is clearance between the Brackets and the factory steel body mount before fully tightening hardware.
7. Repeat Steps 1—6 for Running Board installation.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.



1B(5",4")RUNNING BOARD
02-16 AVALANCHE 1500/00-15 SUBURBAN 1500/00-15 YUKON XL 1500
INCLUDES 02-06 AVALANCHE WITH LOWER BODY CLADDING
EXCLUDES 00-06 SUBURBAN WITH CLADDING AND TUBE STEPS
EXCLUDES 00-06 YUKON XL DENALI WITH BODY MOLDING

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For Polished Finishes: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

For Black Finishes: Mild soap may be used to clean the Running Board.

Passenger Side Installation Pictured

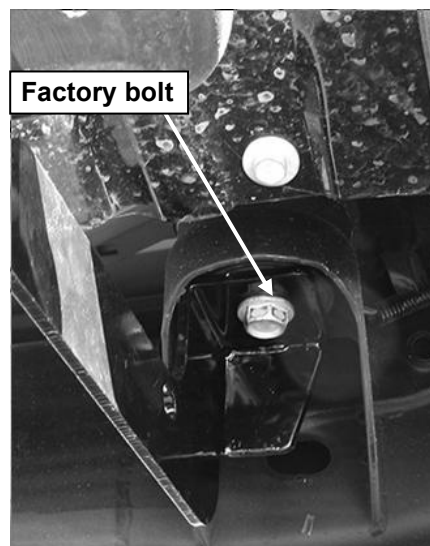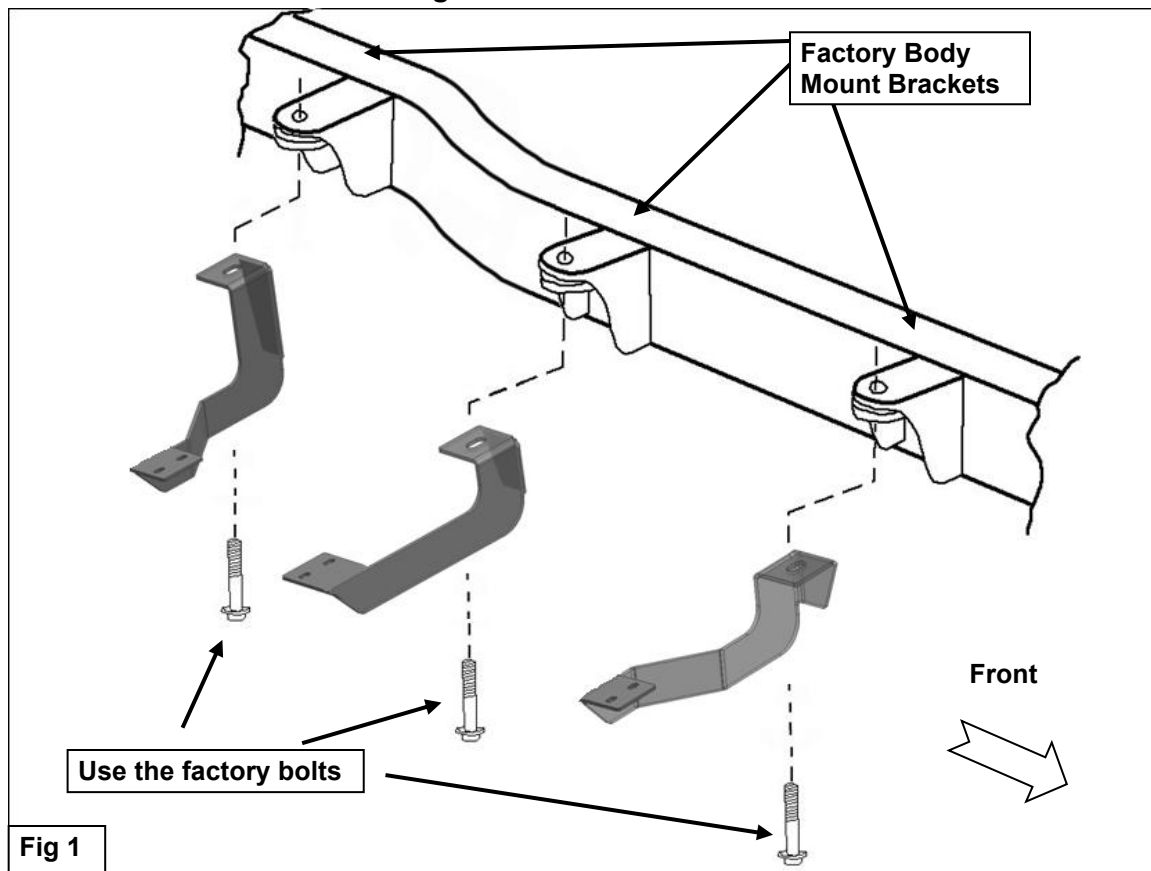


(Fig 2) Bracket installation pictured(example only)

1B(5",4")RUNNING BOARD
02-16 AVALANCHE 1500/00-15 SUBURBAN 1500/00-15 YUKON XL 1500
INCLUDES 02-06 AVALANCHE WITH LOWER BODY CLADDING
EXCLUDES 00-06 SUBURBAN WITH CLADDING AND TUBE STEPS
EXCLUDES 00-06 YUKON XL DENALI WITH BODY MOLDING



(Fig 3) Slip 6mm T-bolts into the bottom channel

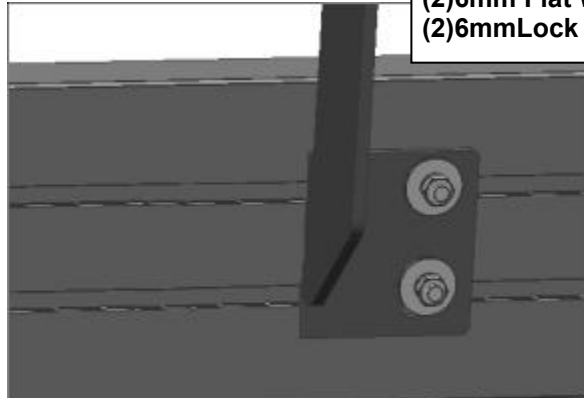

**(2)6mm T-bolts
(2)6mm Flat Washers
(2)6mm Lock nuts**

(Fig 4) Passenger/right bracket installed



Complete Installation