

Installation Instructions for IB04EJH9

by APS Auto Parts Specialist Inc.


Application: For 1998-2003 Dodge Durango 4-Door
Estimated Time: 1 to 2 hours



Disclaimer: Instructions intended for persons aged 18+ please do not attempt without adult supervision. Instructions are not intended to replace professional installation. Damage from improper installation, misuse or modification to the product voids the manufacturer's warranty.

PARTS LIST:

Item	Qty	Description	Item	Qty	Description
#1	2	Running Board(use for left or right)	#8	8	10mm Hex Nuts
#2	1	Driver Front Mounting Bracket(DFM)	#9	8	10mm x 35mm Hex Head Bolts
#3	1	Passenger Front Mounting Bracket(PFM)	#10	16	10mm ID x 30mm OD x 2.5mm Flat Washers
#4	1	Driver Rear Mounting Bracket(DRM)	#11	8	10mm Lock Washers
#5	1	Passenger Rear Mounting Bracket(PRM)	#12	24	6-1.0mm x 20mm T-Bolts
#6	2	Driver Front/Passenger Rear Lower Brackets(DFB/PRB)	#13	24	6mm x 22mm OD x 2mm Flat Washers
#7	2	Driver Rear/Passenger Front Lower Brackets(DRB/PFB)	#14	24	6mm Nylock Nuts

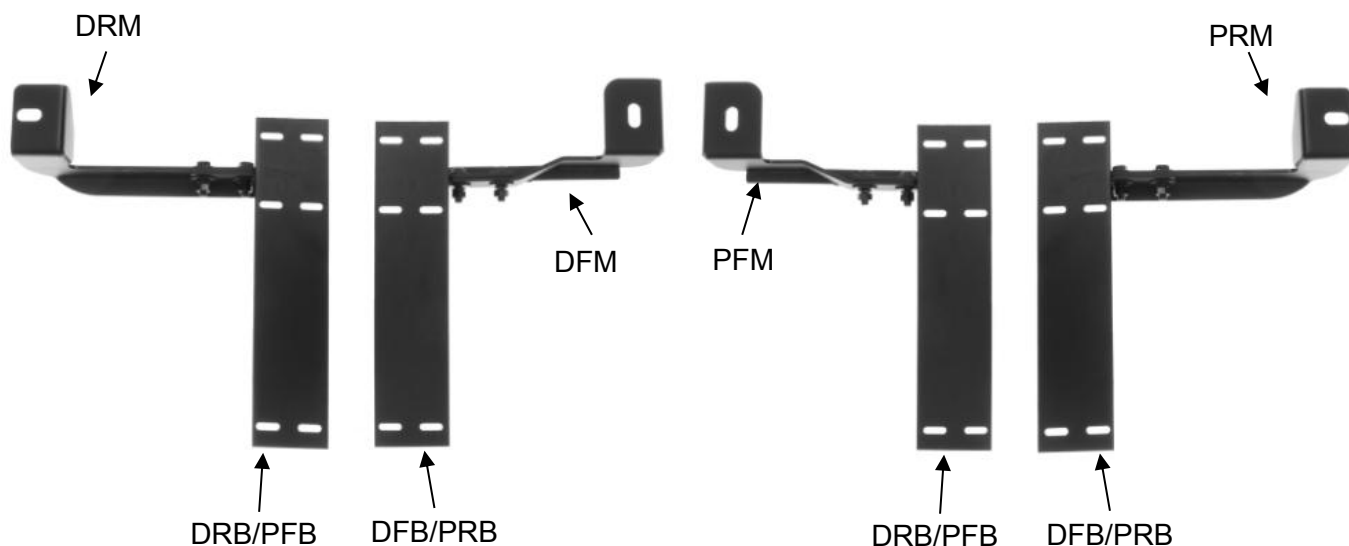

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

1. Locate the driver Front Upper Bracket with the factory bolt. Then, select the Driver Front Lower Mounting Bracket, bolt to the front upper bracket with (2)10mmx35 Hex bolts,(4)10mm flat washers,(2)10mm lock washers and (2)10mm Hex nuts. (**Fig. 1**) . Do not tighten at this time.
2. Locate the driver rear upper Bracket with the factory bolt. Then, select the driver rear lower mounting bracket, bolt to the rear upper bracket with (2)10mmx35 Hex bolts,(4)10mm flat washers,(2)10mm lock washers and (2)10mm Hex nuts. (**Fig. 2**) . Do not tighten at this time.
3. Select a Running Board. Slip(12)6mm T-bolts into each bottom channel(**Fig. 3**). Carefully position the Running Board onto the (2) Mounting Brackets. **IMPORTANT:** Do not slide, (front to back), the Running Board on the Brackets or damage to the finish may result. Attach the Running Board to the Front Mounting Brackets with(6) 6mm T-bolts,(6)6mm flat washers and (6)6mm lock nuts (**Fig. 4**), Do not tighten at this time.
4. Level and adjust the Running Board and tighten all hardware.
5. Repeat **Steps 1 - 4** for Passenger Running Board installation.

6. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For Polished Finishes: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

For Black Finishes: Mild soap may be used to clean the Running Board.

